

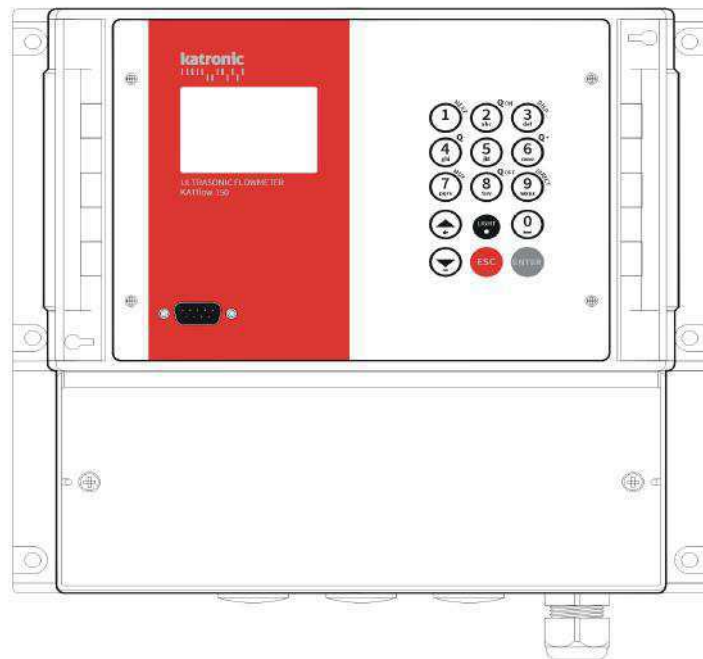


THORNE &
DERRICK
INTERNATIONAL

Thorne & Derrick
+44 (0) 191 410 4292
www.heatingandprocess.com



Operating Instructions



KATflow 150 **Ultrasonic Flowmeter**

Operating Instructions KATflow 150

Version V21EN160420

Copyright © 2016

All rights reserved.

KATflow 150

Operating Instructions

Table of Contents

	Page
1 Safety instructions, legal requirements, warranty, return policy.....	5
1.1 Symbols used in these operating instructions.....	5
1.2 Safety instructions.....	5
1.3 Warranty.....	6
1.4 Return policy.....	6
1.5 Legislative requirements.....	6
2 Introduction.....	7
2.1 System Configuration.....	8
3 Installation.....	9
3.1 Unpacking and storage.....	9
3.1.1 <i>Unpacking</i>	9
3.1.2 <i>Storage</i>	9
3.1.3 <i>Identification of components</i>	9
3.2 Clamp-on sensor installation.....	10
3.3 Installation location.....	10
3.4 Pipe preparation.....	13
3.5 Clamp-on sensor mounting configurations and sensor spacing.....	13
3.6 Flowmeter installation.....	14
3.6.1 <i>Wall mounting</i>	15
3.6.2 <i>Electrical connections</i>	16
3.7 Clamp-on sensor mounting.....	17
3.7.1 <i>Sensor pipe mounting configurations</i>	17
3.7.2 <i>Acoustic coupling gel</i>	17
3.7.3 <i>Correct positioning of the sensors</i>	18
3.7.4 <i>Sensor mounting with tension straps</i>	18
4 Operation.....	20
4.1 Switching On/Off.....	20
4.2 Keypad and display.....	20
4.2.1 <i>Keypad key functions</i>	20
4.2.2 <i>Display functions</i>	22
4.3 Quick setup wizard.....	23
4.4 Measurements.....	25
4.4.1 <i>Main process value (PV) display</i>	25
3-line display format.....	26
4.4.2 <i>Diagnostic displays</i>	26
4.4.3 <i>Totalisers</i>	26
4.4.4 <i>Dual channel display mode</i>	27
4.4.5 <i>Datalogger</i>	27
5 Commissioning.....	28
5.1 Menu structure.....	28
5.2 Diagnostics.....	34
5.3 Display settings.....	34
5.4 Output configuration.....	34
5.4.1 <i>Serial interface RS 232</i>	34
5.4.2 <i>Serial interface RS 485</i>	34

5.4.3 HART compatible output.....	35
5.4.4 Analogue current output 0/4 ... 20 mA.....	35
5.4.5 Analogue voltage output 0-10 v.....	35
5.4.6 Analogue frequency output 2...10k Hz.....	36
5.4.7 Digital Open-Collector output.....	36
5.4.85 Digital relay output.....	36
5.5 Input configurations.....	37
5.5.1 PT100 inputs.....	37
5.5.2 Analogue current input 0/4 ... 20 mA.....	37
5.6 Heat quantity measurement (HQM).....	37
5.7 Sound velocity measurement (SVM).....	38
5.8 Dual-channel flow calculations (maths functions).....	38
5.9 Scope functions.....	38
6 Maintenance.....	39
7 Troubleshooting.....	40
8 Technical data.....	42
9 Specification.....	48
10 Index.....	50
Appendix A.....	51
Appendix B.....	52

1 Safety instructions, legal requirements, warranty, return policy

1.1 Symbols used in these operating instructions



Danger

This symbol represents an immediate hazardous situation which could result in **serious injury, death** or **damage to the equipment**. Where this symbol is shown, do not use the equipment further unless you have fully understood the nature of the hazard and have taken the required precautions.



Attention

This symbol indicates important instructions which should be respected in order to avoid damaging or destroying the equipment. Follow the the precautions given in these instructions to avoid the hazard. Call our service team if necessary.



Call service

Where this symbol is shown call our service team for advice if necessary.



Note

This symbol indicates a note or detailed set-up tip.



Information point.



Operator keys are printed in bold typeface and placed in pointed brackets.

1.2 Safety instructions

- Do not install, operate or maintain this flowmeter without reading, understanding and following these operating instructions, otherwise injury or damage may result.
- Study these operating instructions carefully before the installation of the equipment and keep them for future reference.
- Observe all warnings, notes and instructions as marked on the packaging, on the equipment, and detailed in the operating instructions.
- Do not use the instrument under wet conditions with the battery cover removed or opened.
- Follow the unpacking, storage and preservation instructions to avoid damage to the equipment.
- Install the equipment and cabling securely and safely according to the relevant regulations.
- If the product does not operate normally, please refer to the service and troubleshooting instructions, or contact KATRONIC for help.

1.3 Warranty

- Any product purchased from KATRONIC is warranted in accordance with the relevant product documentation and as specified in the sales contract provided it has been used for the purpose for which it has been designed and operated as outlined in these operating instructions. Misuse of the equipment will immediately revoke any warranty given or implied.
- Responsibility for suitability and intended use of this ultrasonic flowmeter rests solely with the user. Improper installation and operation of the flowmeter may lead to a loss of warranty.
- Please note that there are no operator-serviceable parts inside the equipment. Any unauthorised interference with the product will invalidate the warranty.

1.4 Return policy

If the flowmeter has been diagnosed to have a problem, it can be returned to KATRONIC for repair using the Customer Returns Note (CRN) attached to the Appendix of this manual. KATRONIC regret that for safety reasons we cannot accept the return of the equipment unless accompanied by the completed CRN.

1.5 Legislative requirements

CE marking

The flowmeter is designed to meet the safety requirements in accordance with sound engineering practice. It has been tested and has left the factory in a condition in which it is safe to operate. The equipment is in conformity with the statutory requirements of the EC directive and complies with applicable regulations and standards for electrical safety EN 61010 and electro-magnetic compatibility EN 61326. A CE Declaration of Conformity has been issued in that respect, a copy of which can be found in the Appendix of these operating instructions.

WEEE Directive

The Waste Electrical and Electronic Equipment Directive (WEEE Directive) aims to minimise the impact of electrical and electronic goods on the environment by increasing re-use and recycling and by reducing the amount of WEEE going to land-fill. It seeks to achieve this by making producers responsible for financing the collection, treatment, and recovery of waste electrical equipment, and by obliging distributors to allow consumers to return their waste equipment free of charge.



KATRONIC offers its customers the possibility of returning unused and obsolete equipment for correct disposal and recycling. The Dustbin Symbol indicates that when the last user wishes to discard this product, it must be sent to appropriate facilities for recovery and recycling. By not discarding this product along with other household-type waste, the volume of waste sent to incinerators or landfills will be reduced and natural resources will be conserved. Please use the Customer Return Note (CRN) in the Appendix for return to KATRONIC.

RoHS Directive

All products manufactured by KATRONIC are compliant with the relevant aspects of the RoHS Directive.

2 Introduction

Clamp-on transit-time flowmeter

The KATflow 150 is an ultrasonic flowmeter employing clamp-on sensors for the measurement of liquids in full, enclosed pipes. Flow measurements can be undertaken without interruption of the process or interference with the integrity of the pipeline. The clamp-on sensors are attached to the outside of the pipes. The KATflow 150 uses ultrasonic signals for measurement of the flow, employing the transit-time method.

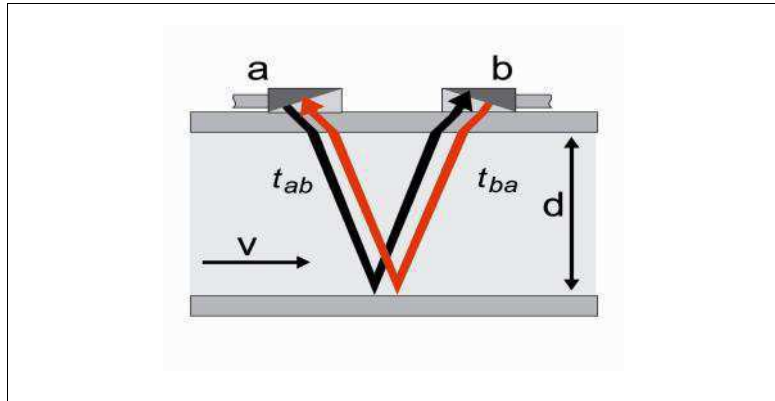


Illustration 1: Clamp-on ultrasonic flowmeter configuration

Measuring principle

Ultrasonic signals are emitted by a transducer installed on a pipe and received by a second transducer. These signals are emitted alternately in the direction of flow and against it. Because the medium is flowing, the transit time of the sound signals propagating in the direction of flow is shorter than the transit time of the signal propagating against the direction of flow. The transit-time difference ΔT is measured and allows the determination of the average flow velocity along the path of acoustic propagation. A profile correction is then performed to obtain the average flow velocity over the cross-sectional area of the pipe, which is proportional to the volumetric flow rate.

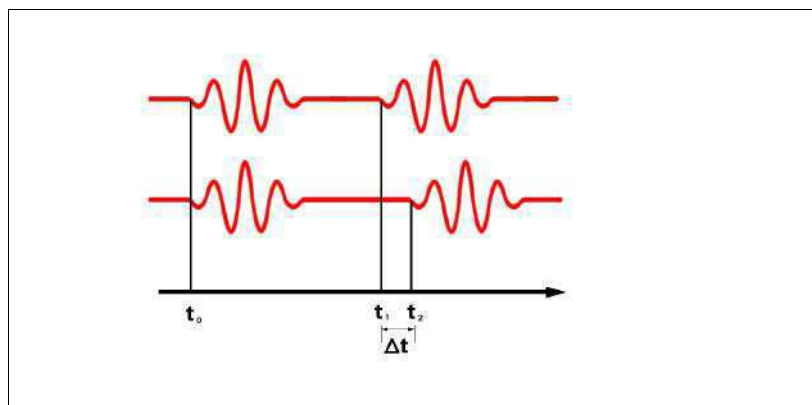


Illustration 2: Transit-time measuring principle

System configuration

A maximum of 2 sensor pairs can be installed - if two pairs are installed these can be configured either in a 1-pipe dual-path or a 2-pipe single path configuration.

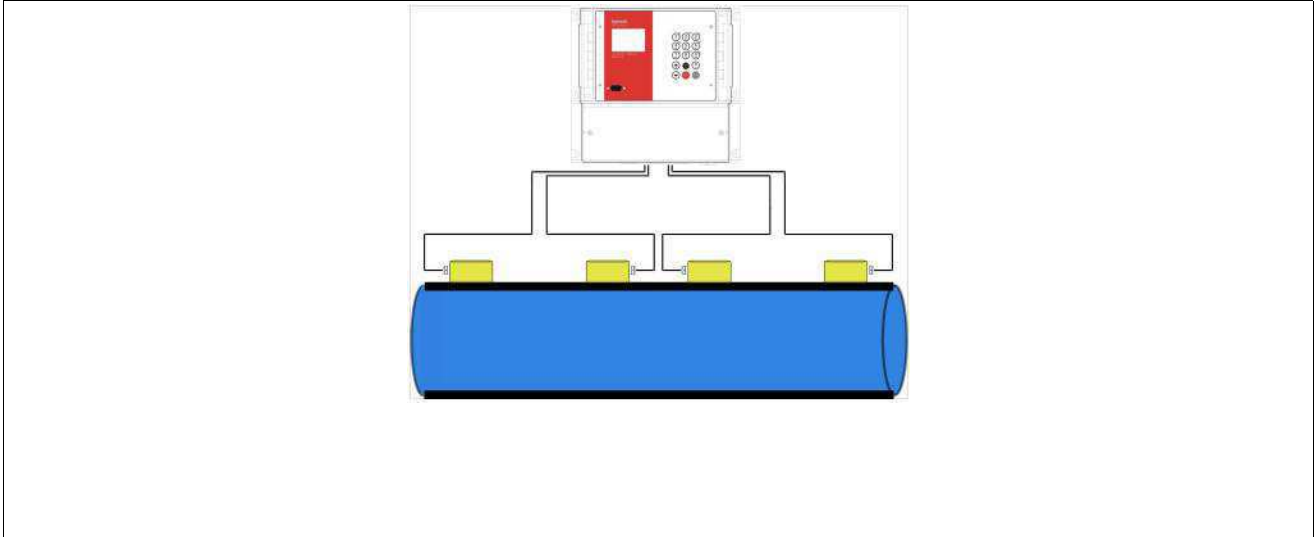


Illustration 3: KF150 with direct sensor connection in a 1 pipe 2 path configuration

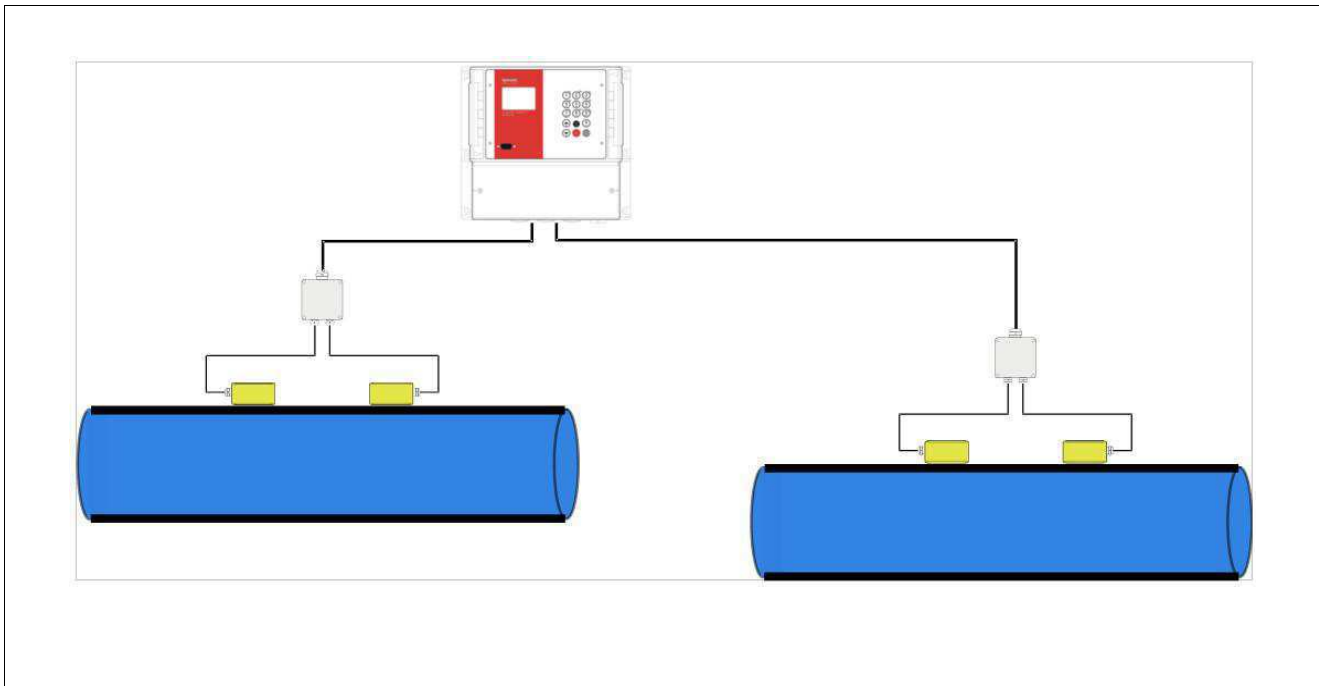


Illustration 4: KF150 2-pipe 1-path configuration using optional junction boxes

3 Installation

3.1 Unpacking and storage

3.1.1 Unpacking

Care should be taken when opening the box containing the flowmeter, any markings or warnings shown on the packaging should be observed prior to opening. The following steps should then be taken:

- Unpack the flowmeter in a dry area.
- The flowmeter should be handled with care and not left in an area where it could be subject to physical shocks.
- If using a knife to remove packaging care should be taken not to damage the flowmeter or cables.
- The flowmeter package and contents should be checked against the delivery note supplied and any missing items reported immediately.
- The flowmeter package and contents should be checked for signs of damage during transport and any problems reported immediately.
- The vendor accepts no responsibility for damage or injury caused during the unpacking of the instrumentation supplied.
- Excess packing materials should be either recycled or disposed of in a suitable way.

3.1.2 Storage

If storage is necessary, the flowmeter and sensors should be stored:

- in a secure location,
- away from water and harsh environmental conditions,
- in such a way as to avoid damage,
- small items should be kept together in the bags provided to avoid loss.

3.1.3 Identification of components

The following items are typically supplied (please refer to your delivery note for a detailed description):

- KATflow 150 ultrasonic flowmeter
- Clamp-on sensors (one pair for single channel operation, two pairs for dual channel operation)
- Sensor connection cable(s) if not direct sensor connection
- Sensor mounting accessories
- Coupling component
- Operating instructions
- Project and/or hazardous area documentation (optional)
- Calibration certificate(s) (optional)
- Temperature measurement probes (optional)

3.2 Clamp-on sensor installation

The correct selection of the sensor location is crucial for achieving reliable measurements and high accuracy. Measurement must take place on a pipe in which sound can propagate (see Acoustic propagation) and in which a rotationally symmetrical flow profile is fully developed (see Straight pipe lengths).

The correct positioning of the transducers is an essential condition for error-free measurements. It ensures that the sound signal will be received under optimal conditions and evaluated correctly. Because of the variety of applications and the different factors influencing the measurement, there can be no standard solution for the positioning of the transducers.

The correct position of the transducers will be influenced by the following factors:

- diameter, material, lining, wall thickness and general condition of the pipe,
- the medium flowing in the pipe,
- the presence of gas bubbles and solid particles in the medium.

Check that the temperature at the selected location is within the operating temperature range of the transducers (see Specification).

After the sensor location has been selected, make sure that that supplied cable is long enough to reach the flow transmitter mounting location. Ensure that the temperature at the selected location is within the ambient operating temperature range of the flow transmitter (see Specification).

Acoustic propagation Acoustic propagation is achieved when the flowmeter is able to receive sufficient signal from the transmitted ultrasonic pulses. The signals are attenuated in the pipe material, the medium and at each of the interfaces and reflections. External and internal pipe corrosion, solid particles and gas content in the medium contribute heavily to signal attenuation.

Straight pipe lengths Sufficient straight lengths of pipe on the inlet and outlet of the measuring location ensure an axi-symmetrical flow profile in the pipe, which is required for good measurement accuracy. If insufficient straight lengths of pipe are available for your application measurements are still obtainable, but the certainty of the measurement can be reduced.

3.3 Installation location

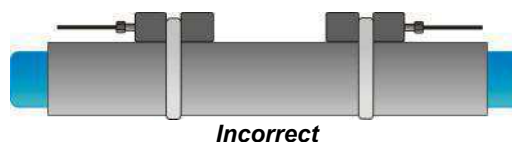
Select an installation location following the recommendations in Table 1 and try to avoid measuring



- in the vicinity of deformations and defects of the pipe,
- near welding seams,
- where deposits could be building up in the pipe.


For a horizontal pipe:

Select a location where the transducers can be mounted on the side of the pipe, so that the sound waves emitted by the transducers propagate horizontally in the pipe. In this way, the solid particles deposited on the bottom of the pipe and the gas pockets developing at the top will not influence the propagation of the signal.



For a free inlet or outlet pipe section:

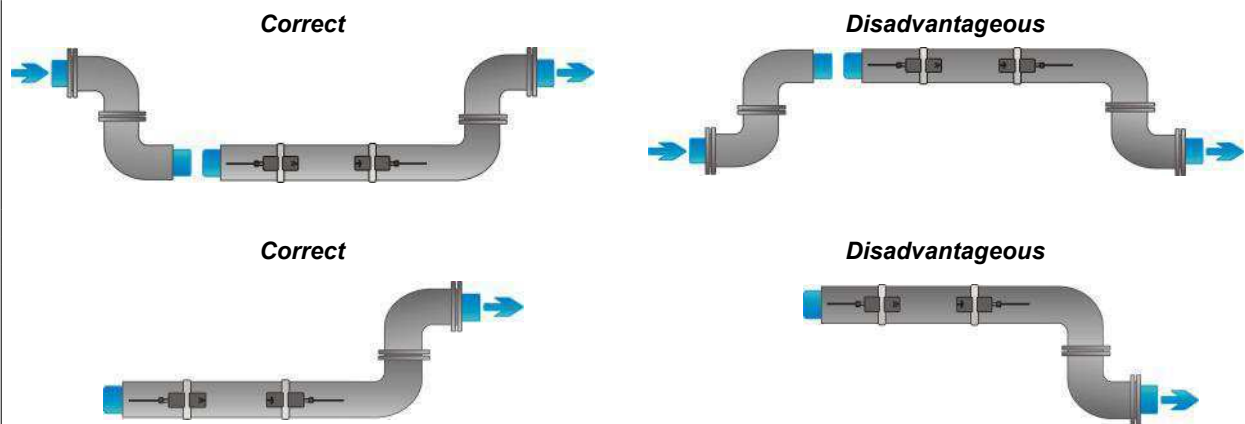Select the measuring point at a location where the pipe cannot run empty.



For a vertical pipe:

Select the measuring point at a location where the liquid flows upward to ensure that the pipe is completely filled.

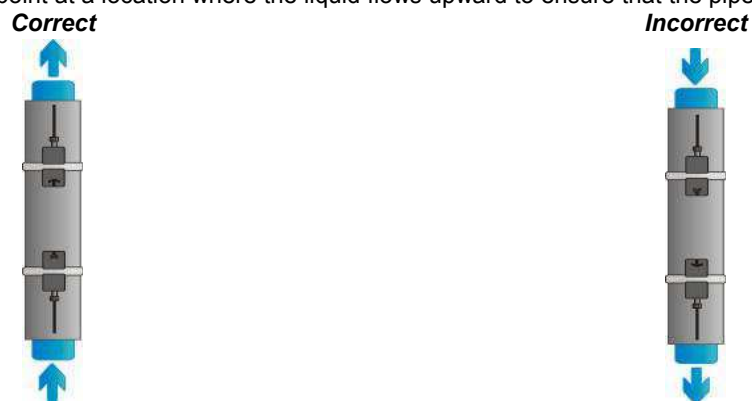


Table 1: Recommendations for sensor mounting location

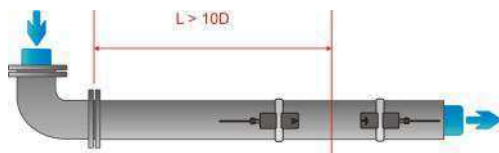


Look for a sensor installation location with sufficient straight pipe to obtain accurate measurements. Please refer to Table 2 as a guideline for recommended distances from disturbance sources.

Disturbance source: 90°-elbow


Inlet

$L \geq 10 D$




Outlet

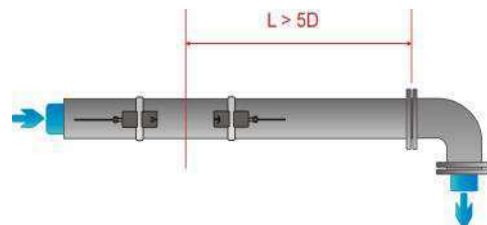$L \geq 5 D$




Disturbance source: 2 x 90°-elbows in one plane

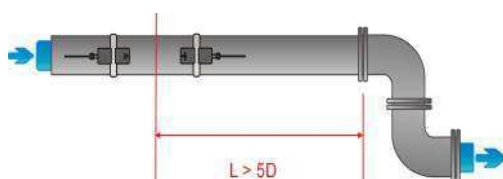Inlet $L \geq 25 D$




Outlet $L \geq 5 D$

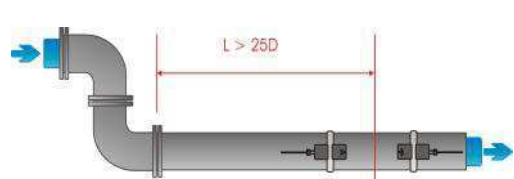


Disturbance source: 2 x 90°-elbows in different planes

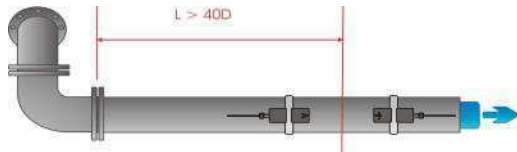Inlet
 $L \geq 40 D$




Outlet
 $L \geq 5 D$

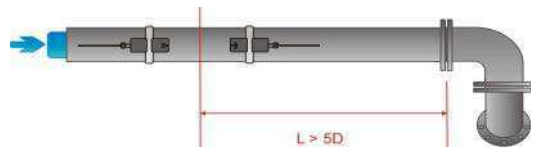


Disturbance source: T-section

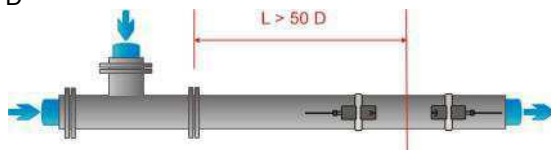Inlet
 $L \geq 50 D$




Outlet
 $L \geq 10 D$

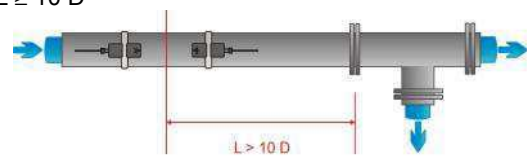


Disturbance source: diffuser

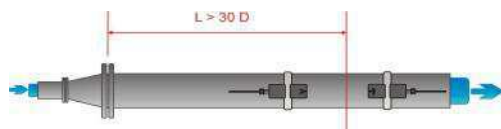Inlet
 $L \geq 30 D$




Outlet
 $L \geq 5 D$

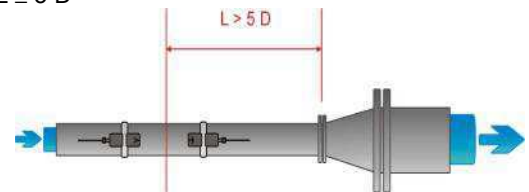


Disturbance source: reducer

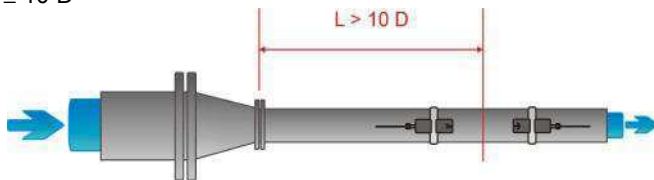Inlet
 $L \geq 10 D$




Outlet
 $L \geq 5 D$

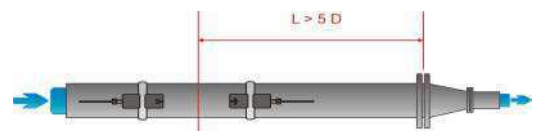


Disturbance source: valve

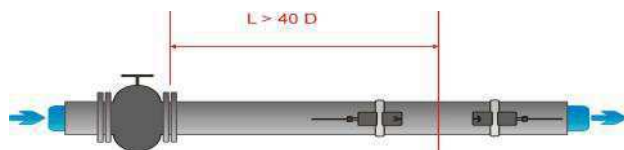Inlet
 $L \geq 40 D$



Outlet
 $L \geq 10 D$

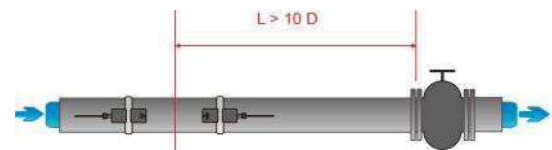

Disturbance source: pump

Inlet
 $L \geq 50 D$

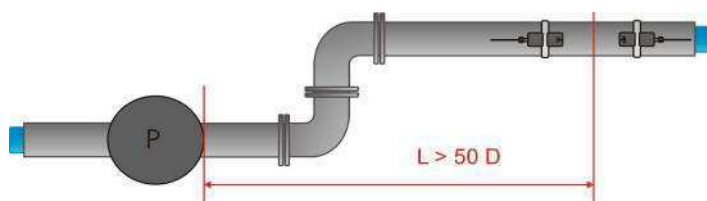


Table 2: Recommended distances from disturbance sources

3.4 Pipe preparation



- Clean dirt and dust from around the area of the pipework where the sensors are to be placed.
- Remove loose paint and rust with a wire brush or file.

Firmly bonded paint does not necessarily need to be removed provided the flow-meter diagnostics indicate sufficient signal strength.

3.5 Clamp-on sensor mounting configurations and separation distance

Reflection Mode

The most common clamp-on sensor mounting configuration is the Reflection Mode, sometimes known as V-Mode (see Illustration 3, sketch (1)). Here, the ultrasonic signal passes twice through the medium (2 signal passes). The Reflection Mode is the most convenient mounting method as the transducer separation distance can be measured easily and the sensors can be accurately aligned. This method should be used whenever possible.

Diagonal Mode

An alternative mounting configuration (Illustration 3, sketch (3)) is the Diagonal mode (Z-Mode). The signals travel only once through the pipe. This method is often used for larger pipes where greater signal attenuation might occur.

Further variation of the Reflection and the Diagonal Modes are possible by altering the number of passes through the pipe. Any even number of passes will require mounting the sensors on the same side of the pipe, while with an odd number of passes, the sensors must be mounted on opposite sides of the pipe. Commonly, for very small pipes, sensor mounting configurations such as 4 passes (W-mode) or 3 passes (N-mode) are used (Illustration 3, sketch (2)).

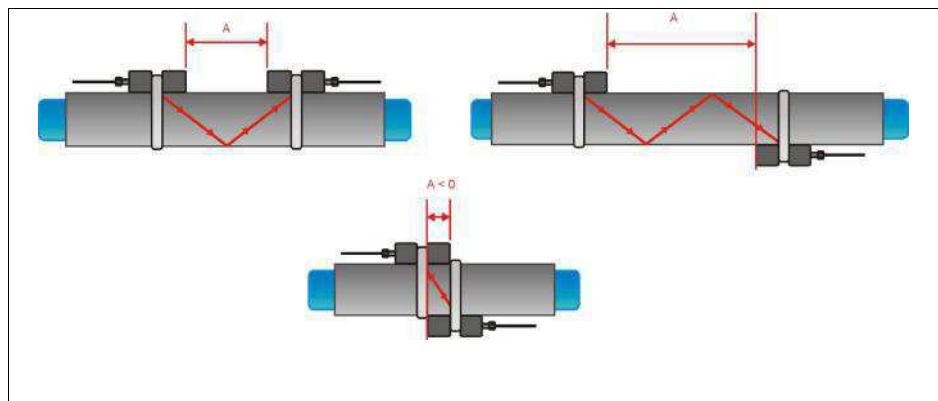


Illustration 5: Clamp-on sensor mounting configurations and sensor spacing

Transducer separation distance

The transducer separation distance A is measured from the inside edges of the sensor heads as shown in illustration 3. It is automatically calculated by the flow-meter based on the parameter entries for pipe outside diameter, wall thickness, lining material and thickness, medium, process temperature, the sensor type and the selected number of signal passes.

Sensor spacing



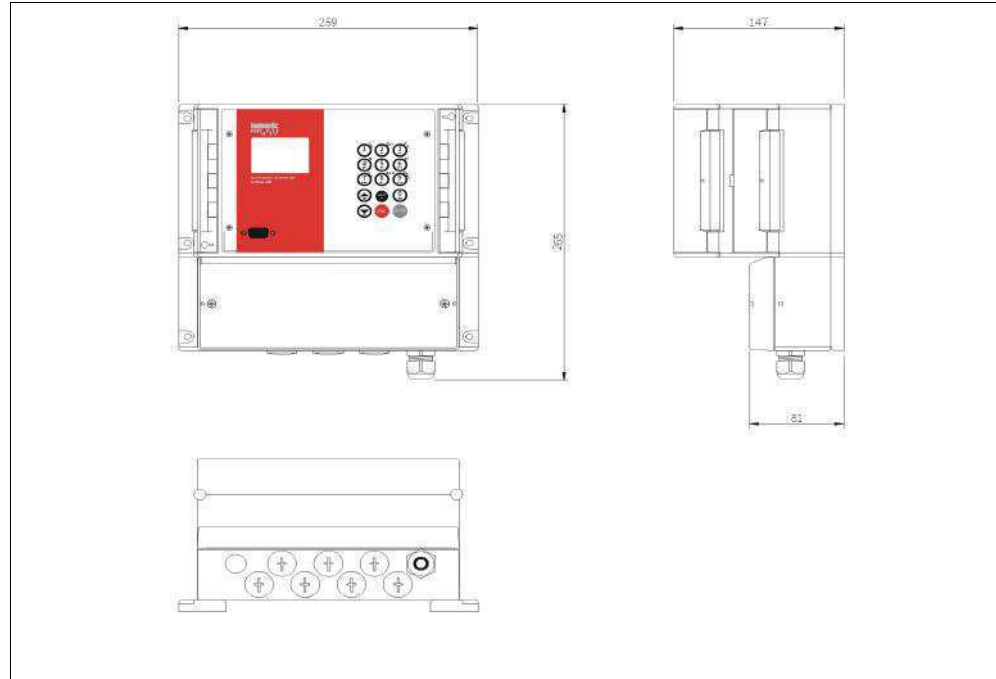
A negative separation distance $A < 0$ can occur for mounting configurations on small pipes where diagonal mode operation has been selected (see Illustration 3, sketch (3)). Negative separation distances may be suggested for reflection mode installations, but are not possible. In these cases, use diagonal mode or a larger number of passes.

3.6 Flowmeter installation


3.6.1 Wall mounting

The KATflow 150 is a wall mounted device and can be installed using suitable screws and wall plugs according to the following drawings.

Flowmeter outline dimensions



Drawing 1: Outline dimensions KATflow 150 ultrasonic flowmeter

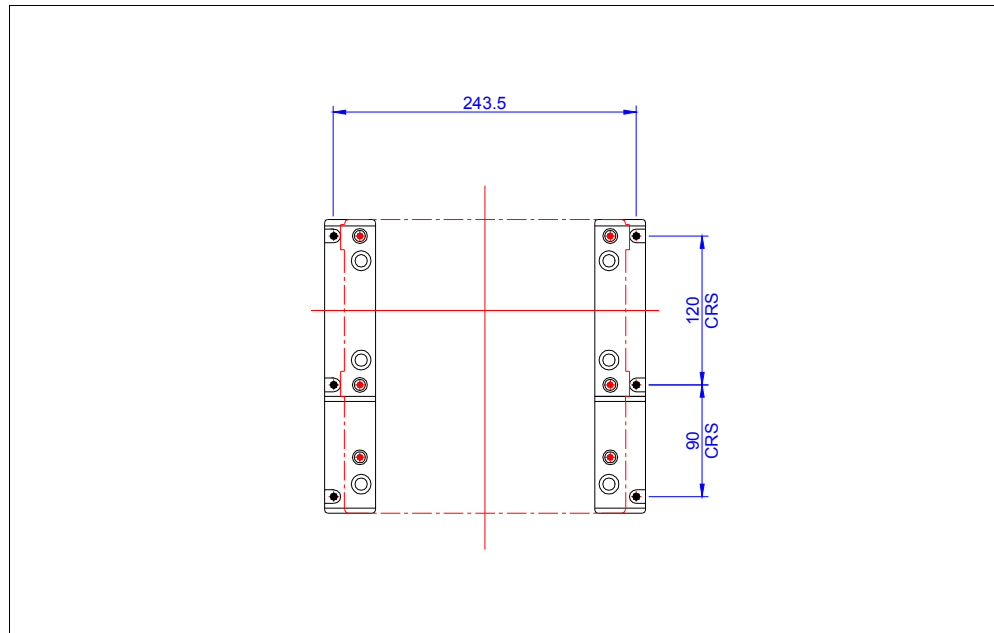**Drilling aid for wall
mounting**

Make sure that the ambient temperature is within the -10 ... 60 °C operating temperature range specified for the flowmeter unit.


3.6.2 Electrical connections

Please note that in order to supply the unit with MAINS POWER, the equipment must be protected by suitably sized switches and circuit breakers.

Electrical wiring



100 ... 240 V AC, 50/60 Hz	10 W
9 ... 36 V DC	10 W

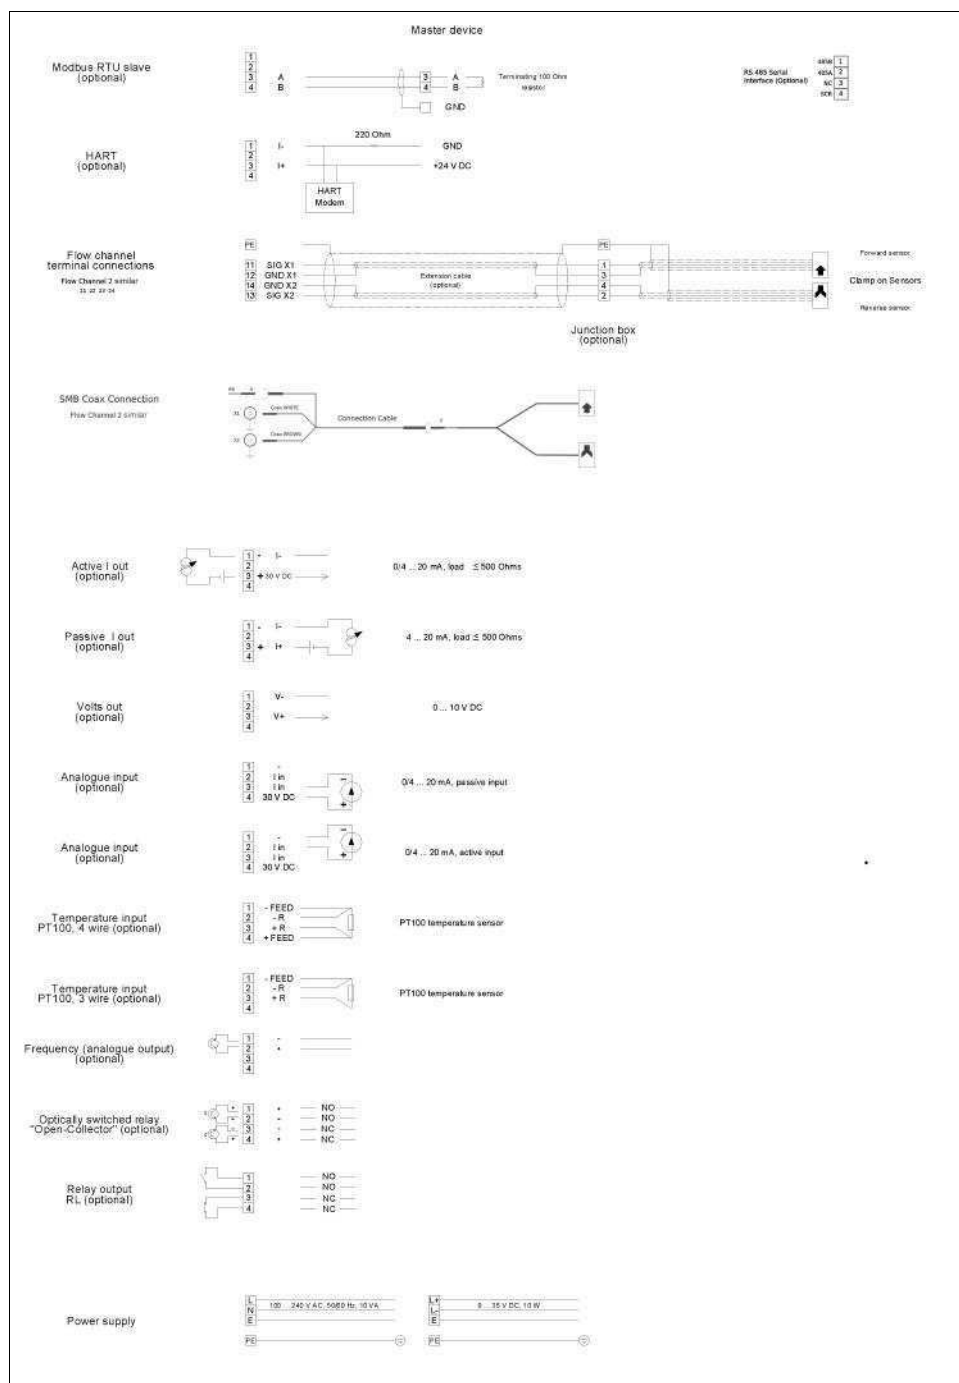

3.7 Clamp-on sensor mounting

Sensor mounting

Before the sensors can be mounted

- the installation location should have been determined,
- a sensor mounting method should be chosen,
- the flowmeter must be mechanically and electrically installed,
- the sensors must be connected to the flowmeter.

Depending on which sensor mounting method is being used, the clamp on sensors are either mounted on the same side of the pipe (Reflection Mode) or on opposite sides of the pipe (Diagonal Mode). The sensor spacing is calculated by the flowmeter from the pipe parameters entered.

3.7.1 Sensor pipe mounting configurations

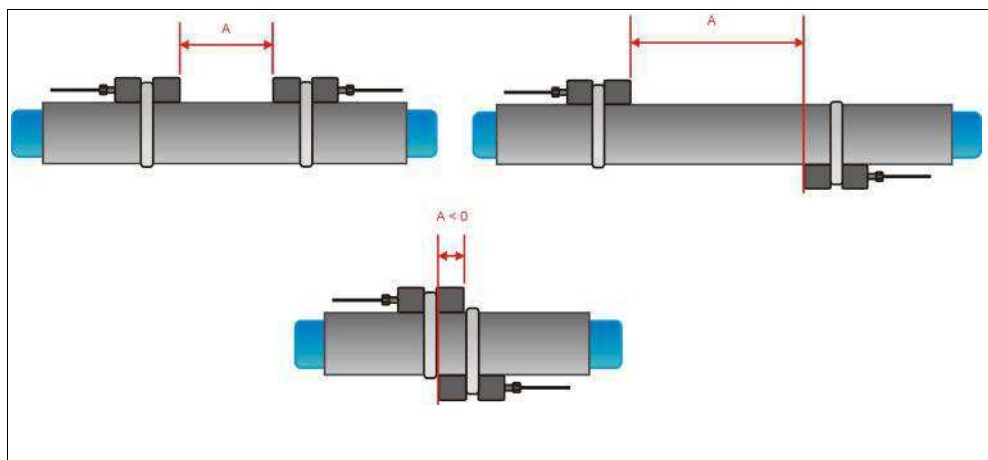


Illustration 6: Sensor pipe mounting configuration

3.7.2 Acoustic coupling gel



In order to obtain acoustical contact between the pipe and the sensors, apply a bead of acoustic coupling gel lengthwise down the centre of the contact area of the sensors.



Illustration 7: Application of acoustic coupling gel

3.7.3 Correct positioning of the sensors

Correct sensor position

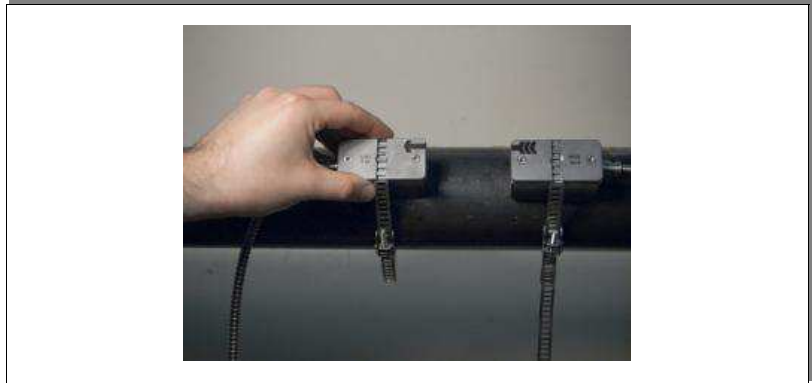


Illustration 8: Correct positioning of the sensors

Always mount the transducer pair so that the free front edges of the sensors face each other.



There is a different engraving on the top of each transducer. The transducers are mounted correctly if the engravings on the two transducers form an arrow. The transducer cables should point in opposite directions.

Later, the arrow, in conjunction with the indicated measured value, will help to determine the direction of flow.

The sensor separation distance is automatically calculated by the flowmeter based on the parameter entries for pipe outside diameter, wall thickness, lining material and thickness, medium, process temperature, the sensor type and the selected number of signal passes.

3.7.4 Sensor mounting with tension straps



Illustration 9: Metallic mounting straps

- Cut the tension straps to the appropriate length.
- Pull at least 2 cm of the tension strap through the slot in the clamp and bend the strap back to secure the clamp to the tension strap.
- Guide the other end of the tension strap through the groove on top of the sensor.
- Ensure sensors have adequate acoustic couplant.
- Place the sensor onto the prepared pipe section.
- Hold the clamp on the transducer with one hand and guide the tension strap around the pipe.
- Pull the tension strap and guide the free end through the clamp so that the clamp hooks engage. Slightly tighten the screw on the clamp.
- Mount the second sensor in the same way.

- Press the sensors firmly onto the pipe. There should be no air pockets between the transducer surface and the pipe wall.
- Using a measuring tape, adjust the sensor separation distance as suggested by the flowmeter. When the sensor positioning screen (Section 3.3) is displayed, the middle bar allows fine adjustment of the sensor location.

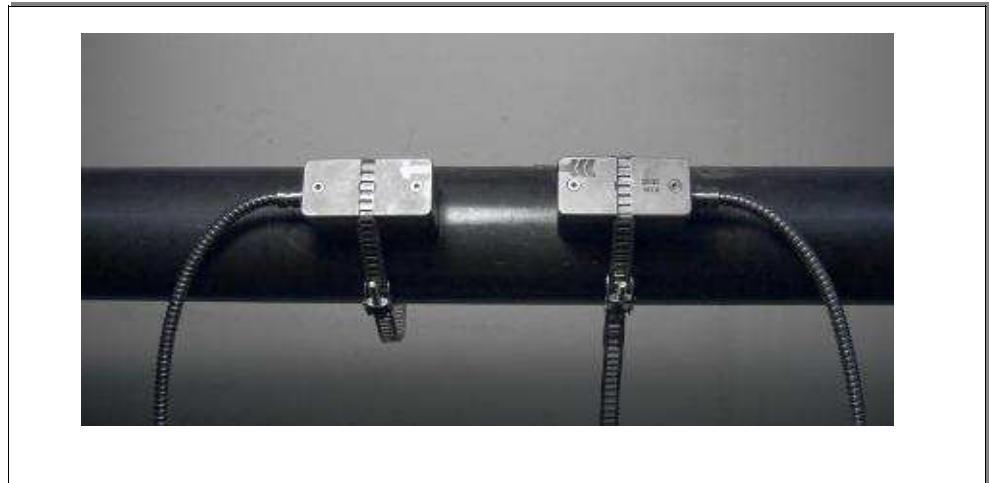


Illustration 10: Sensor mounting with tension straps and clamps

- Ensure that the narrower side of the clip is above and inside the wider side and that the two sides of the clip do not come into contact while tightening, as this will prevent the strap from being correctly tensioned.



Illustration 11: Clip arrangement for correct tensioning

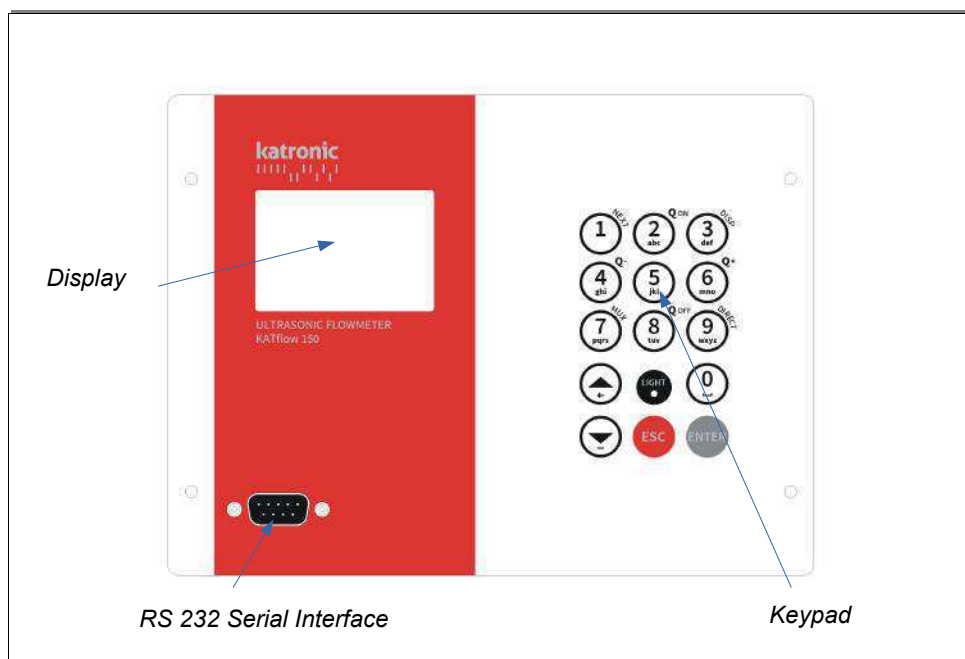
4 Operation

4.1 Switching On/Off





Switching On/Off

The flowmeter is switched on by connecting the power supply to the instrument. Disconnecting the external supply switches off the flowmeter.

4.2 Keypad and display



4.2.1 Keypad key functions

Key	Main function	Secondary function
	Character entry: 1 (1 short key stroke) , (2 short key strokes) . (3 short key strokes) _ (4 short key strokes)	Show NEXT available item
	Character entry: A B C 2 /	Q_{ON} = Start and reset totaliser
	Character entry: D E F 3 ?	Show next DISP lay
	Character entry: G H I 4 <	Q₋ = Reset negative total value












	Character entry: J K L 5 >	
	Character entry: M N O 6 \$	Q+ = Reset positive total value
	Character entry: P Q R S 7	Toggle MULTipleXer (where multi-channel functions are provided)
	Character entry: T U V 8 *	QOFF = Stop totaliser function
	Character entry: W X Y Z 9	
	Move menu/list selection item UP	Character backspace clear
	Character entry: . (decimal point)	Switch LCD backlight on/off
	Character entry: 0 Space character + = #	
	Move menu/list selection item DOWN	Character entry : - (minus sign)
	ESC ape menu item	Abort entry without saving
	ENTER menu item	Confirm entry with saving

Table 3: Menu structure

4.2.2 Display functions

Main measurement display

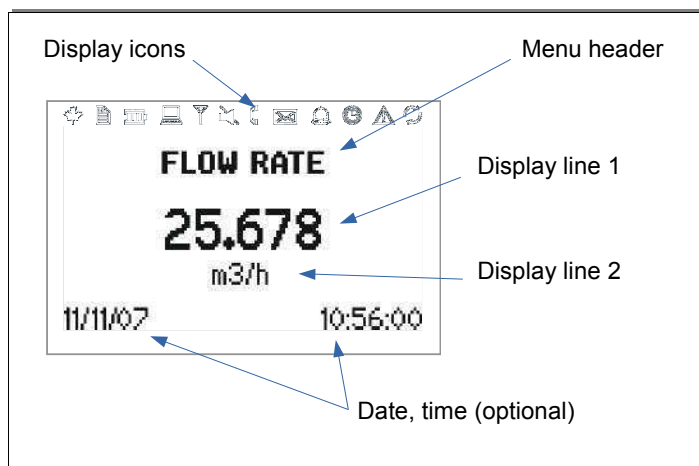




 






Illustration 12: Main display functions

Display icons

Display icon	Function
	On Not used Off
	On Datalogger recording Off Datalogger switched off
	On Not used Off
	On Backlight switched on Off Backlight switched off
	On I/O processor error Off I/O processor functioning correctly
	On Without strike-through: Speaker on Off With strike-through: Speaker off
	On Poor sensor coupling, low SNR Off Sensor coupling OK
	On Not used Off
	On Not used Off




	On Time/date set Off Clock error
	On Error recorded in error log Off No error detected
	On Serial communication on (RS232 and/or RS485) Off Serial communication off
"L", "LT" or "T"	Displays whether flow is laminar, turbulent or mixed

Table 4: Display icons

4.3 Quick setup wizard

Quick start wizard

The quick setup wizard allows for a speedy setup of the most important parameters in order to achieve successful measurements in the shortest possible time:



Display screen	Operation
MAIN MENU Quick start Installation Display In/Output	The main menu is displayed after first power on and the boot-up sequence. Use <UP> and <DOWN> cursor keys to select Quick start . Confirm by pressing <ENTER>.
QUICK START Setup Wizard CH1 Setup Wizard CH2 Start Measurement	Use cursor keys to select Setup Wizard . Confirm by pressing <ENTER>. If sensors are recognised, the serial number will be shown. If not recognised or not connected, they may be selected from a list.
MIDDLE UNITS m3/h m3/m m3/s	Select units of measurement using cursor keys and pressing <ENTER>.
PIPE MATERIAL Stainless Steel Carbon Steel Ductile cast iron	Choose pipe material using cursor keys and pressing <ENTER>.



<p>OUTSIDE DIAMETER</p> <p>76.1</p> <p>mm</p>	<p>Enter outside pipe diameter using alphanumerical keys and confirm by pressing <ENTER>.</p> <p>Use key <UP> as character backspace clear to correct for data entry errors.</p> <p>If 0 is entered, an additional screen appears that allows entering the pipe circumference.</p>
<p>WALL THICKNESS</p> <p>3.4</p> <p>mm</p>	<p>Enter pipe wall thickness using alphanumerical keys and confirm by pressing <ENTER>.</p> <p>Use key <UP> as character backspace clear to correct for data entry errors.</p>
<p>INNER DIAMETER</p> <p>69.3</p> <p>mm</p>	<p>Enter inner pipe diameter using alphanumerical keys and confirm by pressing <ENTER>.</p> <p>The value that appears here will have been calculated from the entered Outside Diameter (or Circumference) and Wall thickness. Entering a new value here will recalculate the Outside Diameter.</p>
<p>FLUID</p> <div data-bbox="470 1131 901 1265"> <p>Water</p> <p>Saltwater</p> <p>Acetone</p> </div>	<p>Select fluid using cursor keys.</p> <p>Confirm by pressing <ENTER>.</p>
<p>TEMPERATURE</p> <p>20.0</p> <p>C</p>	<p>Enter process temperature using alphanumerical keys and confirm by pressing <ENTER>.</p> <p>Use key <UP> as character backspace clear to correct for data entry errors.</p>
<p>LINER MATERIAL</p> <div data-bbox="470 1657 901 1792"> <p>None</p> <p>Epoxy</p> <p>Rubber</p> </div>	<p>Select pipe lining material using cursor keys.</p> <p>Confirm by pressing <ENTER>.</p>

<p style="text-align: center;">PASSES</p> <div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Auto</p> <p style="text-align: center;">1</p> <p style="text-align: center;">2</p> </div>	<p>Select transducer configuration (number of passes) using cursor keys.</p> <p>Auto Automatically</p> <p>1 1 pass, diagonal mode</p> <p>2 2 passes, reflection mode</p> <p>3 3 passes, diagonal mode</p> <p>4 4 passes, reflection mode..etc.</p> <p>Confirm by pressing <ENTER>.</p>
<p style="text-align: center;">QUICK START</p> <div style="border: 1px solid black; padding: 5px;"> <p>Setup Wizard CH1</p> <p>Setup Wizard CH2</p> <p>Start Measurement</p> </div>	<p>Use cursor keys to select Start Measurement. Confirm by pressing <ENTER>.</p>
<p style="text-align: center;">CHNL1 SENSOR</p> <p>Spacing 110.5 mm</p> <p>Using 2 passes</p> <p>Signal 26 dB</p> <div style="border: 1px solid black; height: 20px; width: 100%; position: relative;"> <div style="background-color: black; width: 50%;"></div> <div style="position: absolute; top: 50%; left: 50%; transform: translate(-50%, -50%);">○</div> </div>	<p>Sensor placement screen: Mount transducers with suggested spacing and use middle bar for fine adjustment of position (central position is desired). Observe signal-to-noise (upper bar) and quality (lower bar). These should be of identical length.</p> <p>Confirm by pressing <ENTER> to obtain measurements.</p>
<p style="text-align: center;">CHNL-1</p> <p style="text-align: center; font-size: 2em;">25.678</p> <p style="text-align: center;">m3/h</p> <p>11/11/07 10:56:00</p>	<p>Success!</p>

Table 5: Quick setup wizard

4.4 Measurements

4.4.1 Main process value (PV) display

Measurement is started using the Quick Setup Wizard. Once all the parameters are programmed, any subsequent power-on sequences will bring up the main PV display immediately.

Measurement screens



Display screen	Operation
<p style="text-align: center;">CHNL-1</p> <p style="text-align: center; font-size: 2em;">25.678</p> <p style="text-align: center;">m3/h</p> <p>11/11/07 10:56:00</p>	<p>The main process value can be changed using the menu structure.</p> <p>Press <ESC> at any time to access the main menu.</p> <p>Change to other display modes by pressing <DISP> or <NEXT>.</p>

4.4.2 3-line display format



Display screen	Operation
CHNL-1 - 0.0 m3 25.678 m3/h 1.370 m/s 11/11/07 10:56:00	<p>The three-line display screen is configurable to show flow, totalizers and diagnostic functions.</p> <p>Change to diagnostic displays by pressing <DISP> and to totalizer screens by pressing <NEXT>. Cycle through display screens using <NEXT>.</p>

4.4.3 Diagnostic Displays

Diagnostic screens




Display screen	Operation
DIAGNOSTIC 1 55.2 Gain 20.5 Signal -10.0 Noise 11/11/07 10:56:00	<p>Line 1 shows the amplifier gain.</p> <p>Line 2 displays the signal strength.</p> <p>Line 3 indicates the noise.</p> <p>Change to more diagnostic displays by pressing <NEXT>.</p>

4.4.4 Totalisers

The totaliser displays will only be shown when the totalisers are activated.

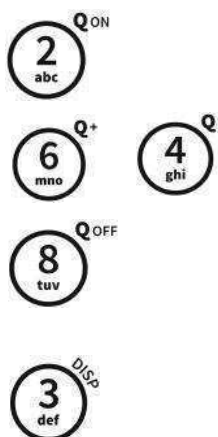Totalisers




Display screen	Operation
CHNL-1 - 1.3 m3 25.678 m3/h 37.3 m3 11/11/07 10:56:00	<p>The flow totalizer may be assigned to lines in the three line display, the datalogger or process outputs. They can be started or reset by pressing <Q_{ON}>.</p> <p>Pressing <Q₊> resets the total accumulated flow in positive flow direction. Pressing <Q₋> resets the total accumulated flow in negative flow direction.</p> <p>The totalizers can be stopped by activating <Q_{OFF}>. Pressing <Q_{ON}> again will reset to zero.</p> <p>Change to other displays or revert to the three line display screen without resetting by pressing <DISP> or <NEXT>.</p>

4.4.5 Dual PV display (multi-channel meters)

1 NEXT

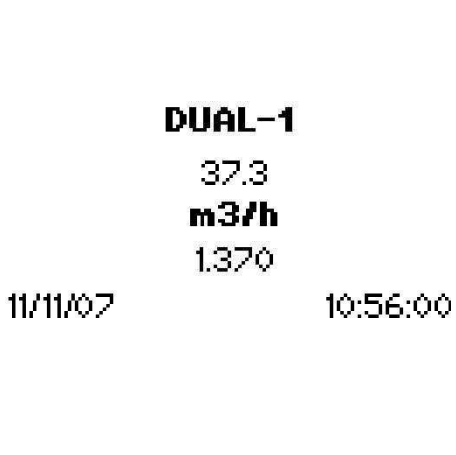
7 MUX
pqrs

Display screen	Operation
	<p>Line 1 shows the PV on the selected channel.</p> <p>Line 2 shows the selected units.</p> <p>Line 3 shows the PV on the other channel (in its selected units)</p> <p>Change to diagnostic displays by pressing <DISP> and to totalizer and main PV screens by pressing <NEXT>.</p> <p>Cycle through available flow channels using <MUX>.</p>

4.4.6 "Math" display (when enabled on multi-channel meters)

3 DISP
def

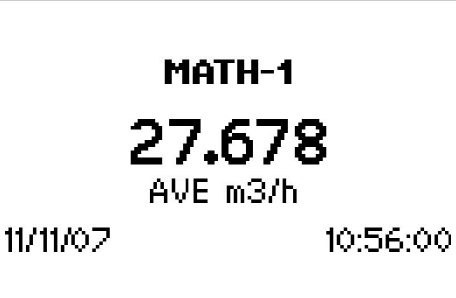1 NEXT

Display screen	Operation
	<p>Displays the "Math" function (when enabled).</p> <p>Sum, difference, average and maximum can be selected in the "Calculation" menu. "Average" shown in illustration.</p> <p>Change to diagnostic displays by pressing <DISP> and to totalizer, dual and main PV screens by pressing <NEXT>.</p>

4.4.7 Datalogger



The datalogger is enabled from the Main Menu, and operates when a non-zero value is entered for the interval.

Items to be logged are selected from the "Selection" screen. "ENTER" selects items, "0" deselects. Up to ten items may be selected.

(Note : If no items are selected the logger will record blank space)

Send logger by serial port to a terminal program by selecting "Log download".

Clear the logger by selecting "Log Erase".

Remaining logger space can be seen in the Diagnostic displays.

Logged data can be downloaded, viewed and exported using the KatData+ software except when "wrap" mode has been enabled.

5 Commissioning

5.1 Menu structure

Menu structure

Main menu	Menu level 1	Menu level 2	Description/settings
Quick Start			
	Setup Wizard CH1		
		Sensor type	<i>Indication of sensor type and serial number if automatically detected, otherwise select from list ↑↓</i> K1N, K1L, K1E, K1Ex, K1P, K4N, K4L, K4E, K4Ex, K4P, K0, M, Q, Special
		Middle (main displayed) Units	<i>Select from list where available ↑↓</i> m/s, f/s, in/s, m3/h, m3/min, m3/s, l/h, l/min, l/s, USgal/h, USgal/min, USgal/s, bbl/d, bbl/h, bbl/min, g/s, t/h, kg/h, kg/min, m3, l, USgal, bbl, g, t, kg, W, kW, MW, J, kJ, MJ, Signal dB, noise dB, SNR (dB), C m/s (sound speed), CU (housing temperature), K (correction factor), REY (Reynolds number), SOS, DEN, KIN, SHC (sound speed, density, kinematic viscosity, Specific Heat Capacity from inputs/calculation), TEMP (specified or measured fluid temperature), PRESS (specified or measured fluid pressure), Tin, Tout (inlet and outlet temperature) Other (Assignable input or calculated value), Math (Calculated value – see below).
		Pipe material	<i>Select from list ↑↓</i> Stainless steel, Carbon steel Ductile cast iron, Grey cast iron Copper, Lead PVC, PP, PE, ABS Glass, Cement, User
		Pipe c-speed	<i>Only if user pipe material selected</i> 600 ... 6553.5 m/s
		Outside dia- meter	6 ... 6500 mm
		Wall thickness	0.5 ... 75 mm
		Inner diameter	6 ... 6500 mm
		Fluid	<i>Select from list ↑↓</i> Water, Salt water Acetone, Alcohol, Ammonia Carbon Tet (carbon tetrachloride) Ethanol, Ethyl alcohol, Ethyl ether Ethylene glycol, Glycol/water 50% Kerosene, Methanol, Methyl alcohol Milk, Naphtha, Car oil Freon R134a, Freon R22 Hydrochloric acid, Sour cream, Sulphuric acid Toluene, Vinyl chloride User (enter kinematic viscosity, density, medium c-speed)
		Kinematic vis- cosity	<i>Only if user fluid selected</i> 0.001 ... 30000 mm ² /s
		Density	<i>Only if user fluid selected</i> 100 ... 2000 kg/m ³
		Medium c- speed	<i>Only if user fluid selected</i> 800 ... 3500 m/s

		Temperature	-30 ... 300 °C
		Liner Material	<i>Select from list</i> ↑↓ None, Epoxy, Rubber, PVDF, PP, Glass, Cement, User (liner c-speed)
		Liner c-speed	<i>Only if lining material selected</i> 600 ... 6553.0 m/s
		Liner thickness	<i>Only if lining material selected</i> 1.0 ... 99.0 mm
		Passes	<i>Select from list</i> ↑↓ Auto, 1...16
	Setup Wizard CH2		
			<i>As setup wizard for channel 1</i>
	Start Measurement		
		Sensor type	<i>Indication of sensor type and serial number if automatically detected, otherwise select from list</i> ↑↓ As Setup Wizard
		Sensor frequency	<i>SP1, only for special, unrecognised sensors</i>
		Wedge angle	<i>SP2, only for special, unrecognised sensors</i>
		Wedge c-speed 1	<i>SP3, only for special, unrecognised sensors</i>
		Wedge c-speed 2	<i>SP4, only for special, unrecognised sensors</i>
		Crystal offset	<i>SP5, only for special, unrecognised sensors</i>
		Spacing offset	<i>SP6, only for special, unrecognised sensors</i>
		Zero flow offset	<i>SP7, only for special, unrecognised sensors</i>
		Upstream offset	<i>SP8, only for special, unrecognised sensors</i>
		Sensor placement	Adjust sensor position
Installation			
		Select channel	Channel 1, Channel 2
	Pipe		
		Material	<i>Select from pipe material list</i> ↑↓
		Outside diameter	6 ... 6500 mm
		Wall thickness	0.5 ... 75 mm
		C-speed	600 ... 6554 m/s (transverse sound speed)
		Circumference	18.8 ... 20420.4 mm
		Roughness	0.0 ... 10 mm
	Medium		
		Fluid	<i>Select from fluid list</i> ↑↓
		Kinematic (viscosity)	0.001 ... 30000 mm ² /s
		Density	100 ... 2000 kg/m ³
		C-speed	100 ... 3500 m/s
		Temperature	-30 ... 300 °C

	Lining		
		Material	Select from material list ↑↓
		Thickness	1 ... 99 mm
		C-speed	600 ... 6553.0 m/s
	Passes		
		Passes	Select from list ↑↓
Display			
		Select channel	Channel 1, Channel 2
		Select line of display (Top, Middle, Bottom)	Select from unit list ↑↓
		Damping	Reduces fluctuations in the display output 1 ... 255 s
		Metric/Imp.	Select metric or Imperial units.
In/Output			
	Type		Select from list ↑↓
	I Out		Analogue current output
		Source	Select from list ↑↓ Off, Channel 1, Channel 2, Math 1, Math 2 System, Test
		Units	Select from unit list ↑↓
		Min Value	Min. process variable (PV) value that corresponds to 0/4 mA
		Max Value	Max. process variable (PV) value that corresponds to 20 mA
		Damping	Additional smoothing of the current output, the higher the damping factor, 1 ... 255 s
		Span	0-20mA or 4-20mA
		Error	Defines output behaviour in the event of error Select from list ↑↓ Hold (hold last value, select hold time), 3.8mA, 21.0mA
	Voltage out		
		Source	Select from list ↑↓
		Units	Select from list ↑↓
		Min Value	Min. process variable (PV) value that corresponds to 0v
		Max Value	Max. process variable (PV) value that corresponds to 10v
		Damping	Additional smoothing of the current output, the higher the damping factor, 1 ... 255 s
		Error	Defines output behaviour in the event of error Select from list ↑↓
	Frequency out		
		Source	Select from list ↑↓
		Units	Select from list ↑↓
		Min Value	Min. process variable (PV) value that corresponds to minimum frequency
		Max Value	Max. process variable (PV) value that corresponds to maximum frequency
		Damping	Additional smoothing of the current output, the higher the damping factor, 1 ... 255 s

		Error	<i>Defines output behaviour in the event of error Select from list ↑↓</i>
	Pulse Out		
		Source	<i>Select from list ↑↓</i>
		Units	<i>Select from unit list ↑↓</i>
		Mode	<i>Select from list ↑↓ Alarm (select on point, off point) Pulse (select value, width) Linear (select min value, max value, damping)</i>
	Relay Out		
		Source	<i>Select from list ↑↓</i>
		Units	<i>Select from unit list ↑↓</i>
		Mode	<i>Select from list ↑↓ Alarm (select on point, off point) Pulse (select value, width) Linear (select min value, max value, damping)</i>
	PT100 4 WIRE		
		Source	<i>Select from list ↑↓</i>
		Type	<i>Select from list ↑↓ User (Fixed value - enter) PT100 (Measured - select whether inlet, outlet, compensation and enter offset if required)</i>
	Current In		
		Source (channel)	<i>Select from list ↑↓ Off, Channel 1, Channel 2, Math 1, Math 2 System, Test</i>
		Source (value)	<i>Select from list ↑↓ Density, Viscosity, Temperature, Other</i>
			<i>Minimum, Maximum, Span settings as on outputs</i>
	RS 485		[where specified]
	Modbus RTU		[where specified]
	HART®		[where specified]
	Other In/Out types		Refer to Technical Support
System			
	Instrument info		
		Model Code	KF150
		Serial No.	<i>Example: 15002013</i>
		HW Revision	<i>Example: 2.0, 1.5</i>
		SW Revision	<i>Example: 3.1, 2.4</i>
	Calculation		
		Select channel	Channel 1, Channel 2
		Low F Cut	<i>± Low flow velocity cut off 0 ... 0.025 m/s</i>
		Max F Cut	<i>± Maximum flow velocity cut off 0 ... 30 m/s</i>
		Corrected	<i>Apply flow velocity profile correction Yes No</i>
		PV Offset	<i>Calibration process variable zero offset -30 ... 30 m/s</i>
		PV Scaling	<i>Calibration process variable gradient scaling 0.001... 10 units (based on flow velocity)</i>

		Zero Cal	Zero calibration settings
		Zero	Perform auto zero calibration Yes No
		Track	Track zero offset Yes No
		Delta	Zero flow delta time offset in ns, read from sensor PROM or entered directly for special sensors
		Timeup	Upstream transit-time offset in μ s, allows for fixed delays in special sensors, buffer rods and extension leads
		Math Function	Select from list $\uparrow\downarrow$ None, Sum, Difference, Average (mean), Max
		Heat Capacity	Specific heat capacity of medium
	User		
		Identifier	Example: Pump P3A 9 character string
		Tag No.	Example: 1FT-3011 9 character string
		Password	Enter a password (Default 1111) See also "Key Lock" below
	Test		
		Installation	Control system simulation: 60 second ramping up of flow velocity in m/s from 0 to programmed Max F Cut and subsequent 60 second ramping down, i.e. the process variable would change over complete possible range. All configured outputs will exhibit their programmed behaviour. Yes No
		Display	Display screen test routine
		Keypad	Keypad test routine
		Memory	Memory test routine, Memory erase yes/no
		Peripherals	Unit temperature, time, date, clock, battery meter, charger test routine
		Ultrasonics	Tests ultrasonic board and sensors
		Calibrate PT100s	Tests measured temperature and resistance
		Reset PT100s	Resets temperature inputs
	Settings		
		Date	Example: 03/10/07
		Time	Example: 09:27:00
		Date Format	Select from list $\uparrow\downarrow$ dd/mm/yy mm/dd/yy yy/mm/dd
		Language	Select from list $\uparrow\downarrow$ As installed
		Keypad	Enable keypad sound Yes No

	Defaults		<i>Reload factory default settings, except for date and time</i> Yes No
	Key Lock		Locks the keypad until password is entered (four number keys followed by "ENTER"). See also "Password" above.
Diagnostics			
		Temperature	<i>Shows control unit temperature</i>
		Log Memory	<i>Percentage of unused datalogger memory, estimated time remaining</i>
Datalogger			
		Interval	<i>A value of zero turns the datalogger off, a non-zero value turns the datalogger on and defines the logging interval.</i> 0 ... 999 s
	Channel 1, Channel 2	Selection	<i>Select up to 10 items from list ↑↓ ENTER to select, 0 to remove</i> m/s, f/s, in/s, m ³ /h, m ³ /min, m ³ /s, l/h, l/min, l/s, USgall/h, USgall/min, USgall/s, bbl/d, bbl/h, bbl/min, g/s, t/h, kg/h, kg/min, m ³ , l, USgall, bbl, g, t, kg, W, kW, MW, J, kJ, MJ, Sig dB (signal), noise dB, SNR, C m/s (sound speed), CU (housing temperature) Tin, Tout (inlet and outlet temperature) TEMP (specified or measured fluid temperature), SOS, DEN. KIN (derived sound speed, density, kinematic viscosity) Math (Calculated value – see below)
		Low Memory	<i>Warning output: The amount of memory remaining at which the flowmeter begins to give an audible warning.</i> 0 ... 100 %
		Log Wrap	<i>Saves "selected" items as a continuous stream without headers (Note : this means files cannot be processed by KATData+)</i> Yes/No
		Log Download	<i>Sends logger content to selected serial communication port.</i>
		Log Erase	<i>Erase datalogger</i> Yes/No
Serial Comms			
		Mode	<i>Select from list ↑↓</i> None Printer, Diagnostic, Log download, Calibration Test (not normally used by user)
		Baud	<i>Select from list ↑↓</i> 9600, 19200, 57600, 115200
		Parity	<i>Select from list ↑↓</i> None Even (Default) Odd
		Type	<i>Select from list where fitted</i>

Table 6: Firmware menu structure

5.2 Diagnostics

Diagnostic screens can be viewed directly during measurement using the **3/DISP** and **1/NEXT** keys, or through the menu structure.

5.3 Display settings

Customer specific settings for data to be displayed can be achieved using the appropriate menu items to select units for the top, middle and bottom lines.

5.3.1 Main PV

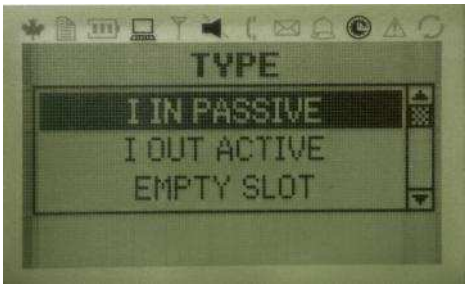
The main Process Value (PV) is the primary measurement data, and is usually displayed as the Middle Units.



5.4 Output configuration

The assignment of output slots is detected by the flowmeter, and will be as appears in the table in the "In/Output" menu - first line = Slot 1, second line = Slot 2 etc.

Example with passive current input on slot 1 and active current output on slot 2 shown below :



Serial interfaces



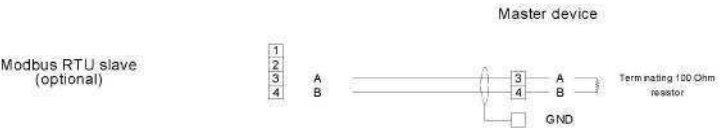
5.4.1 Serial interface RS 232

The RS 232 serial interface can be used to transmit data on-line or to communicate with peripheral equipment and computers.

5.4.2 Serial interface RS 485 / Modbus RTU

The RS 485 interface is used for connecting up to 32 flowmeters to a centralised computer system. Each flowmeter is given an unique address to be able to communicate effectively. The communication protocol used conforms to the conventions of the Modbus RTU protocol, a description of which is given in a separate document. Please refer to customer support for further information.

In addition, the ASCII printer output can also directed through the RS 485 interface.

Wiring	
Setup	Please refer to customer support.
Operation	Please refer to customer support.



5.4.3 HART compatible output

The KF100 can also be configured with an optional module which responds to output commands conforming to the HART protocol. Please refer to customer support for further information.

HART® is a registered trademark of the HART Communication Foundation.

Wiring	
Setup	Please refer to customer support.
Operation	Please refer to customer support.

Analogue outputs

5.4.4 Analogue current output 0/4 ... 20 mA

The analogue current outputs operate in a 4 ... 20 mA or 0 ... 20 mA span.

Current outputs may be assigned to process values in the “mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.



Wiring	
Electrical characteristics	<p>0/4...20 mA active and 4...20 mA passive options. Galvanically isolated from main electronics and from other I/O's. Passive: U=9...30 V, RLoad=50 ohm typical. Resolution: 16 bit, accuracy: 0.1 % of MV. Active: RLoad<500 ohm, U=30 V. Resolution: 16 bit, accuracy: 0.1 % of MV.</p>

5.4.5 Analogue voltage output 0 – 10 v




Voltage outputs may be assigned to process values in the “mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.

Wiring	
Electrical characteristics	<p>Galvanically isolated from main electronics and from other I/O's. Range 0...10 V. RLoad=1000 ohm. Resolution: 16 bit, accuracy: 0.1% of MV.</p>

5.4.6 Analogue frequency output (passive)



 Frequency outputs may be assigned to process values in the “mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.

Wiring	Frequency (analogue output) (optional) 
Electrical characteristics	Galvanically isolated from main electronics and from other I/O's. Open-collector: 2...10000 Hz. U=24 V, I _{max} =4 mA.


Digital outputs

5.4.7 Digital open collector output

Open-Collector outputs may be assigned to process values in the “mode” section of the output menu. The outputs are configured using the menu structure.

The totaliser function is enabled and controlled using the menu structure




Wiring	Optically switched relay "Open-Collector" (optional) 
Electrical characteristics	Galvanically isolated from main electronics and from other I/O's. Totaliser pulse, value 0.01...1000/unit. Active high and active low available. Width 1...990 ms. U=24 V, I _{max} =4 mA.

5.4.8 Digital relay output

 Relay outputs may be assigned to process values in the “mode” section of the output menu. The relay outputs are configured using the menu structure.



Wiring	
Electrical characteristics	Form A (SPDT-NO and NC) contacts Width 3...990 ms. U=48 V, I _{max} =250 mA. Galvanically isolated from main electronics and from other I/O's. Mode: Alarm, fault, totaliser (programmable). 1 Form A (SPST-NO) contacts. 1 Form A (SPST-NC) contacts. Width 3...990 ms. U=48 V, I _{max} =250 mA.

5.5 Input configuration

5.5.1 PT100 inputs

Inputs



Wiring	<div> <div>Temperature input PT100, 4 wire (optional)</div> <div> <div>1 - FEED</div> <div>2 - R</div> <div>3 + R</div> <div>4 + FEED</div> </div> </div> <div> <div>Temperature input PT100, 3 wire (optional)</div> <div> <div>1 - FEED</div> <div>2 - R</div> <div>3 + R</div> <div>4</div> </div> </div>
Electrical characteristics	3 and 4 wire options. Galvanically isolated from main electronics and from other I/O's. Temperature: Range -50 ... 400 °C. Resolution: 0.01 K. Accuracy: ±0.1 K.

5.5.2 Analogue current input 0/4 ... 20 mA



Wiring	<div> <div>Analogue input (optional)</div> <div> <div>1 -</div> <div>2 I in</div> <div>3 I in</div> <div>4 30 V DC</div> </div> </div> <div> <div>Analogue input (optional)</div> <div> <div>1 -</div> <div>2 I in</div> <div>3 I in</div> <div>4 30 V DC</div> </div> </div>
Electrical characteristics	Active (top) or passive (bottom) variants Measuring range active = 0 ... 20 mA at 30 V Measuring range passive = 4 ... 20 mA Accuracy = 0.1 % of measured value

5.6 Heat quantity measurement (HQM) – [where installed]

If a heat quantity unit is specified for the Process Value, the KF100 will prompt the user for the Specific Heat Capacity of the medium in J/g/K (for example 4.186 J/g/K for water).

This may also be entered in the System\Calculation sub-menu.



The In/Output menu will then allow the user to select the temperature input source; either PT100 temperature sensors or a fixed value for measurement against a known inlet or outlet temperature. Where PT100 sensors are selected, the flowmeter will prompt the user for a temperature offset, which may be useful where the temperature of the medium differs from the temperature of the pipe wall (for example with unlagged pipes). If a fixed value is selected, the meter will ask the user to specify this value.

When heat quantity units are selected, these behave as any other Process Value and may be totalized, or applied to a Process Output.



5.7 Sound velocity measurement (SVM)

The measured sound velocity (SOS) is available as a Process Value and a diagnostic function (where specified) during measurement and may be applied to a Process Output by selecting "C m/s" from the appropriate menu.

5.8 Dual-channel flow calculations (maths functions)

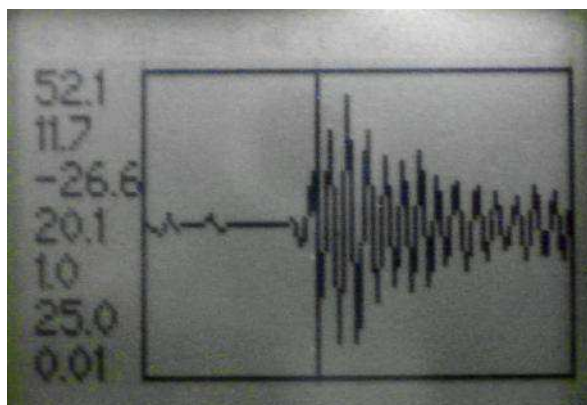
Where suitably equipped, dual channel calculations are available from the System/Calculation/Math menu.

These allow the user to select the sum, difference, average (mean) or maximum of the two flow channels.

This value may be displayed or applied to a Process Output by selecting MATH from the appropriate output menu.

5.9 Scope function

Katronic flowmeters have an additional scope function which shows a representation of the pulse received by the sensors on Channel 1.



In addition to displaying the received pulse, this screen lists the following data (from top to bottom) :

Gain (dB)
Signal (dB)
Noise (dB)
Transit time (us)
Delta (ns) - [time downstream minus time upstream]
Control unit temperature (degC)
Flow (m/s)

6 Maintenance

KATflow flowmeters are maintenance free concerning the flow measurement functions. Within the scope of periodic inspections, regular inspection for signs of damage or corrosion is recommended for the transducers, the junction box if installed, and the flowmeter housing.

6.1 Service/Repair

KATflow flowmeters have been carefully manufactured and tested. If installed and operated in accordance with the operating instructions, no problems are usually experienced.

Should you nevertheless need to return a device for inspection or repair, please pay attention to the following points:



- Due to statutory regulations on environmental protection and safeguarding the health and safety of our personnel, the manufacturer may only handle, test and repair returned devices that have been in contact with products without risk to personnel and environment.
- This means that the manufacturer can only service this device if it is accompanied by a Customer Return Note (CRN) confirming that the device is safe to handle.

If the device has been operated with toxic, caustic, flammable or water-endangering products, you are kindly requested:



- to check and ensure, if necessary by rinsing or neutralising, that all cavities are free from such dangerous substances,
- to enclose a certificate with the device confirming that is safe to handle and stating the product used.

7 Troubleshooting

Should there be the need to call customer service, please let us know the following details:



- Model code
- Serial number
- SW, HW revision
- Error log list

Possible error messages may include the following:

Error list

Error message	Group	Description	Error handling
USB INIT FAIL	Hardware	Internal board communication error	Power on/off, otherwise call customer support
NO SERIAL NO.	Hardware	Failed to read from FRAM	Call customer support
NO VERSION NO.	Hardware	Failed to read from FRAM	Call customer support
PARA READ FAIL	Hardware	Failed to read from FRAM	Load defaults, otherwise call customer support
PARA WRITE FAIL	Hardware	Failed to write to FRAM	Load defaults, otherwise call customer support
VAR READ FAIL	Hardware	Failed to read from FRAM	Call customer support
VAR WRITE FAIL	Hardware	Failed to write to FRAM	Call customer support
SYSTEM ERROR	Hardware		Call customer support
VISIBILITY ERR	Hardware	Failed to read from FRAM	Call customer support
FRAM LONG WRITE ERR	Hardware	Failed to write to FRAM	Call customer support
FRAM READ ERR	Hardware	Failed to read from FRAM	Call customer support
RTC ERR	Hardware	Real Time Clock failure	Power on/off, otherwise call customer support
EXTMEM ERR	Hardware	Logger memory failure	Power on/off, otherwise call customer support
SPI ERR	Hardware	SPI bus failure	Power on/off, otherwise call customer support
I2C ERR	Hardware	I2C bus failure	Power on/off, otherwise call customer support
MATH ERR	Software	Internal calculation error	Call customer support
STACK ERR	Software	Internal calculation error	Call customer support
ADDR ERR	Software	Internal calculation error	Call customer support
OSC ERR	Software	Internal calculation error	Call customer support
ADC ERR	Software	Internal calculation error	Call customer support
IO ERR	Software	Internal calculation error	Call customer support
TIMING ERR	Software	Internal calculation error	Call customer support
COMM INIT ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM START ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM HS0 ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support

COMM HS1 ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM READ AVE ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM READ RAW ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM READ HISTORY ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM CRC ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
SENSOR COUPLING ERR	Application	Weak sensor coupling, low SNR	Recouple sensors, check installation, reduce number of passes, look for other location, then have a cup of tea and call customer support!

Table 7: Error messages

7.1 Data download difficulties

If difficulties are encountered downloading the logger data : -

- Check that the flowmeter is switched on and not in measurement mode.
- Check that the same number COM port is allocated in the “Device Manager” (or equivalent) as is set in the KatData+ software.
- Check that the settings (baud, parity, word length, stop bits) are identical.
- Use the supplied connectors – whether connecting to a 9-pin COM port or converting from serial communication to a Universal Serial Bus (USB).
- Is the logger in "Wrap" mode? If "yes", use a terminal program and the "Log download" command. If "No", KatData+ software may also be used.

8 Technical data

Material	Sound Speed* Shear Wave (at 25 °C)	
	m/s	ft/s
Steel, 1% Carbon, hardened	3,150	10,335
Carbon Steel	3,230	10,598
Mild Steel	3,235	10,614
Steel, 1% Carbon	3,220	10,565
302 Stainless Steel	3,120	10,236
303 Stainless Steel	3,120	10,236
304 Stainless Steel	3,141	10,306
304L Stainless Steel	3,070	10,073
316 Stainless Steel	3,272	10,735
347 Stainless Steel	3,095	10,512
"Duplex" stainless steel	2,791	9,479
Aluminium	3,100	10,171
Aluminium (rolled)	3,040	9,974
Copper	2,260	7,415
Copper (annealed)	2,325	7,628
Copper (rolled)	2,270	7,448
CuNi (70%Cu 30%Ni)	2,540	8,334
CuNi (90%Cu 10%Ni)	2,060	6,759
Brass (Naval)	2,120	6,923
Gold (hard-drawn)	1,200	3,937
Inconel	3,020	9,909
Iron (electrolytic)	3,240	10,630
Iron (Armco)	3,240	10,630
Ductile Iron	3,000	9,843
Cast Iron	2,500	8,203
Monel	2,720	8,924
Nickel	2,960	9,712
Tin (rolled)	1,670	5,479
Titanium	3,125	10,253
Tungsten (annealed)	2,890	9,482
Tungsten (drawn)	2,640	8,661
Tungsten carbide	3,980	13,058
Zinc (rolled)	2,440	8,005
Glass (pyrex)	3,280	10,761
Glass (heavy silicate flint)	2,380	7,808
Glass (light borate crown)	2,840	9,318
Nylon	1,150	3,772
Nylon, 6-6	1,070	3,510
Polyethylene (LD)	540	1,772
PVC, CPVC	1,060	3,477
Acrylic resin	1,430	4,690
PTFE	2,200	7,218

* Please note these values are to be considered nominal. Solids may be inhomogeneous and anisotropic. Actual values depend on exact composition, temperature, and to a lesser extent, on pressure and stress.

All data given at 25 °C (77 °F) unless otherwise stated

Substance	Chemical Formula	Specific Gravity	Sound Speed		Change Kinematic Viscosity v/°C		x10-6 ft²/s
			m/s	ft/s	m/s/°C	mm²/s	
Acetic anhydride	(CH ₃ CO) ₂ O	1.082 (20 °C)	1,180	3,871.4	2.5	0.769	8.274
Acetic acid, anhydride	(CH ₃ CO) ₂ O	1.082 (20 °C)	1,180	3,871.4	2.5	0.769	8.274
Acetic acid, nitrile	C ₂ H ₃ N	0.783	1,290	4,232.3	4.1	0.441	4.745
Acetic acid, ethyl ester	C ₄ H ₈ O ₂	0.901	1,085	3,559.7	4.4	0.467	5.025
Acetic acid, methyl ester	C ₃ H ₆ O ₂	0.934	1,211	3,973.1		0.407	4.379
Acetone	C ₃ H ₆ O	0.791	1,174	3,851.7	4.5	0.399	4.293
Acetylene dichloride	C ₂ H ₂ Cl ₂	1.26	1,015	3,330.1	3.8	0.400	4.304
Alcohol	C ₂ H ₆ O	0.789	1,207	3,960	4.0	1.396	15.02
Ammonia	NH ₃	0.771	1,729 (33 °C)	(- 5,672.6 (-27 °C)	6.68	0.292 (-33 °C)	3.141 (-27 °F)
Benzene	C ₆ H ₆	0.879	1,306	4,284.8	4.65	0.711	7.65
Benzol	C ₆ H ₆	0.879	1,306	4,284.8	4.65	0.711	7.65
Bromine	Br ₂	2.928	889	2,916.7	3.0	0.323	3.475
n-Butane(2)	C ₄ H ₁₀	0.601 (0°C)	1,085 (5° C)	(- 3,559.7 (23 °C)	5.8		
2-Butanol	C ₄ H ₁₀ O	0.81	1,240	4,068.2	3.3	3.239	34.851
sec-Butylalcohol	C ₄ H ₁₀ O	0.81	1,240	4,068.2	3.3	3.239	34.851
n-Butyl bromide (46)	C ₄ H ₉ Br	1.276 (20°C)	1,019 (20°C)	3,343.2 (68°F)		0.49 (15°C)	5.272 (59°C)
n-Butyl chloride (22,46)	C ₄ H ₉ Cl	0.887	1,140	3,740.2	4.57	0.529 (15°C)	5.692 (59°F)
Carbon tetrachloride	CCl ₄	1.595 (20°C)	926	3,038.1	2.48	0.607	6.531
Carbon tetrafluoride (Freon 14)	CF ₄	1.75 (-150 °C)	875.2 (150 °C)	(- 2,871.5 (-238 °F)	6.61		
Chloroform	CHCl ₃	1.489	979	3,211.9	3.4	0.55	5.918
Dichlorodifluoromethane (Freon 12)	CCl ₂ F ₂	1.516 (40 °C)	774.1	2,539.7	4.24		
Ethanol	C ₂ H ₆ O	0.789	1,207	3,960	4.0	1.39	14.956
Ethyl acetate	C ₄ H ₈ O ₂	0.901	1,085	3,559.7	4.4	0.489	5.263
Ethyl alcohol	C ₂ H ₆ O	0.789	1,207	3,960	4.0	1.396	15.020
Ethyl benzene	C ₈ H ₁₀	0.867 (20 °C)	1,338 (20 °C)	4,89.8 (68 °F)		0.797 (17 °C)	8.575 (63 °F)
Ether	C ₄ H ₁₀ O	0.713	985	3,231.6	4.87	0.311	3.346
Ethyl ether	C ₄ H ₁₀ O	0.713	985	3,231.6	4.87	0.311	3.346
Ethylene bromide	C ₂ H ₄ Br ₂	2.18	995	3,264.4		0.79	8.5
Ethylene chloride	C ₂ H ₄ Cl ₂	1.253	1,193	3,914		0.61	6.563
Ethylene glycol	C ₂ H ₆ O ₂	1.113	1,658	5,439.6	2.1	17,208 (20°C)	185.158 (68°F)
Fluorine	F	0.545 (-143 °C)	403 (- 143 °C)	(- 1,322.2 (- 225 °F)	11.31		
Formaldehyde, methyl ester	C ₂ H ₄ O ₂	0.974	1,127	3,697.5	4.02		
Freon R12			774.2	2,540			
Glycol	C ₂ H ₆ O ₂	1.113	1,658	5,439.6	2.1		
50% Glycol/50% H ₂ O			1,578	5,177			
Isopropanol	C ₃ H ₈ O	0.785 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)		2.718	29.245
Isopropyl alcohol (46)	C ₃ H ₈ O	0.785 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)		2.718	29.245
Kerosene		0.81	1,324	4,343.8	3.6		

Methane	CH ₄	0.162 (-89 °C)	405 (-89 °C)	1,328.7 (-128 °F)	17.5		
Methanol	CH ₄ O	0.791 (20 °C)	1,076	3,530.2	292	0.695	7.478
Methyl acetate	C ₃ H ₆ O ₂	0.934	1,211	3,973.1		0.407	4.379
Methyl alcohol	CH ₄ O	0.791	1,076	3,530.2	292	0.695	7.478
Methyl benzene	C ₇ H ₈	0.867	1,328 (20 °C)	4,357 (68 °F)	4.27	0.644	7.144
Milk, homogenized			1,548	5,080			
Naphtha		0.76	1,225	4,019			
Natural Gas		0.316 (-103 °C)	753 (-103 °C)	2,470.5 (-153 °F)			
Nitrogen	N ₂	0.808 (-199 °C)	962 (-199 °C)	3,156.2 (-326 °F)		0.217 (-199 °C)	2.334 (-326 °F)
Oil, Car (SAE 20a.30)		1.74	870	2,854.3		190	2,045.093
Oil, Castor	C ₁₁ H ₁₀ O ₀	0.969	1,477	4,845.8	3.6	0.670	7.209
Oil, Diesel		0.80	1,250	4,101			
Oil, Fuel AA gravity		0.99	1,485	4,872	3.7		
Oil (Lubricating X200)			1,530	5,019.9			
Oil (Olive)		0.912	1,431	4,694.9	2.75	100	1,076.365
Oil (Peanut)		0.936	1,458	4,738.5			
Propane (-45 to -130 °C)	C ₃ H ₈	0.585 (-45 °C)	1,003 (-45 °C)	3,290.6 (-49 °F)	5.7		
1-Propanol	C ₃ H ₈ O	0.78 (20 °C)	1,222 (20 °C)	4,009.2 (68 °F)			
2-Propanol	C ₃ H ₈ O	0.785 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)		2.718	29.245
Propene	C ₃ H ₆	0.563 (-13 °C)	963 (-13 °C)	3,159.4 (9 °F)	6.32		
n-Propyl-alcohol	C ₃ H ₈ O	0.78 (20 °C)	1,222 (20 °C)	4,009.2 (68 °F)		2.549	27.427
Propylene	C ₃ H ₆	0.563 (-13 °C)	963 (-13 °C)	3,159.4 (9 °F)	6.32		
Refrigerant 11	CCl ₃ F	1.49	828.3 (0 °C)	2,717.5 (32 °F)	3.56		
Refrigerant 12	CCl ₂ F ₂	1.516 (-40 °C)	774.1 (-40 °C)	2,539.7 (-40 °C)	4.24		
Refrigerant 14	CF ₄	1.75 (-150 °C)	875.24 (-150 °C)	2,871.6 (-268 °F)	6.61		
Refrigerant 21	CHCl ₂ F	1.426 (0 °C)	891 (0 °C)	2,923.2 (32 °F)	3.97		
Refrigerant 22	CHClF ₂	1.491 (-69 °C)	893.9 (50 °C)	2,932.7 (122 °F)	4.79		
Refrigerant 113	CCl ₂ F-CClF ₂	1.563	783.7 (0 °C)	2,571.2 (32 °F)	3.44		
Refrigerant 114	CClF ₂ -CClF ₂	1.455	665.3 (10 °C)	2,182.7 (14 °F)	3.73		
Refrigerant 115	C ₂ ClF ₅		656.4 (50 °C)	2,153.5 (-58 °F)	4.42		
Refrigerant C318	C ₄ F ₈	1.62 (-20 °C)	574 (-10 °C)	1,883.2 (14 °F)	3.88		
Sodium nitrate	NoNO ₃	1.884 (336 °C)	1,763.3 (336 °C)	5,785.1 (637 °F)	0.74	1.37 (336 °C)	14.74 (637 °F)
Sodium nitrite	NoNO ₂	1.805 (292 °C)	1,876.8 (292 °C)	6,157.5 (558 °F)			
Sulphur	S		1,177 (250 °C)	3,861.5 (482 °F)	-1.13		
Sulphuric Acid	H ₂ SO ₄	1.841	1,257.6	4,126	1.43	11.16	120.081

Tetrachloroethane	C2H2Cl4	1553 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)	1.19	12.804
Tetrachloro-ethene	C2Cl4	1.632	1,036	3,399		
Tetrachloro-Methane	CCl4	1.595 (20 °C)	926	3,038.1	0.607	6.531
Tetrafluoro-methane (Freon 14)	CF4	1.75 (-150 °C)	875.24 (-150 °C)	2,871.5 (-283 °F)	6.61	
Toluene	C7H8	0.867 (20 °C)	1,328 (20 °C)	4,357 (68 °F)	4.27	0.644
Toluol	C7H8	0.866	1,308	4,291.3	4.2	0.58
Trichloro-fluoromethane (Freon 11)	CCl3F	1.49	828.3 (0 °C)	2,717.5 (32 °F)	3.56	
Turpentine		0.88	1,255	4,117.5	1.4	15.064
Water, distilled	H2O	0.996	1,498	4,914.7	-2.4	1.00
Water, heavy	D2O		1,400	4,593		
Water, sea		1.025	1531	5023	-2.4	1.00

Temperature		Sound Speed in Water	
° C	° F	m/s	ft/s
0	32.0	1402	4600
1	33.8	1407	4616
2	35.6	1412	4633
3	37.4	1417	4649
4	39.2	1421	4662
5	41.0	1426	4679
6	42.8	1430	4692
7	44.6	1434	4705
8	46.4	1439	4721
9	48.2	1443	4734
10	50.0	1447	4748
11	51.8	1451	4761
12	53.6	1455	4774
13	55.4	1458	4784
14	57.2	1462	4797
15	59.0	1465	4807
16	60.8	1469	4820
17	62.6	1472	4830
18	64.4	1476	4843
19	66.2	1479	4853
20	68.0	1482	4862
21	69.8	1485	4872
22	71.6	1488	4882
23	73.4	1491	4892
24	75.2	1493	4899
25	77.0	1496	4908
26	78.8	1499	4918
27	80.6	1501	4925
28	82.4	1504	4935
29	84.2	1506	4941
30	86.0	1509	4951
31	87.8	1511	4958
32	89.6	1513	4964
33	91.4	1515	4971

34	93.2	1517	4977
35	95.0	1519	4984
36	96.8	1521	4984
37	98.6	1523	4990
38	100.4	1525	4997
39	102.2	1527	5010
40	104.0	1528	5013
41	105.8	1530	5020
42	107.6	1532	5026
43	109.4	1534	5033
44	111.2	1535	5036
45	113.0	1536	5040
46	114.8	1538	5046
47	116.6	1538	5049
48	118.4	1540	5053
49	120.2	1541	5056
50	122.0	1543	5063
51	123.8	1543	5063
52	125.6	1544	5066
53	127.4	1545	5069
54	129.2	1546	5072
55	131.0	1547	5076
56	132.8	1548	5079
57	134.6	1548	5079
58	136.4	1548	5079
59	138.2	1550	5086
60	140.0	1550	5086
61	141.8	1551	5089
62	143.6	1552	5092
63	145.4	1552	5092
64	147.2	1553	5092
65	149.0	1553	5095
66	150.8	1553	5095
67	152.6	1554	5099
68	154.4	1554	5099
69	156.2	1554	5099
70	158.0	1554	5099
71	159.8	1554	5099
72	161.6	1555	5102
73	163.4	1555	5102
74	165.2	1555	5102
75	167.0	1555	5102
76	167.0	1555	5102
77	170.6	1554	5099
78	172.4	1554	5099
79	174.2	1554	5099
80	176.0	1554	5099
81	177.8	1554	5099
82	179.6	1553	5095
83	181.4	1553	5095
84	183.2	1553	5095
85	185.0	1552	5092
86	186.8	1552	5092
87	188.6	1552	5092

88	190.4	1551	5089
89	192.2	1551	5089
90	194.0	1550	5086
91	195.8	1549	5082
92	197.6	1549	5082
93	199.4	1548	5079
94	201.2	1547	5076
95	203.0	1547	5076
96	204.8	1546	5072
97	206.6	1545	5069
98	208.4	1544	5066
99	210.2	1543	5063
100	212.0	1543	5063
104	220.0	1538	5046
110	230.0	1532	5026
116	240.0	1524	5000
121	250.0	1516	5007
127	260.0	1507	4944
132	270.0	1497	4912
138	280.0	1487	4879
143	290.0	1476	4843
149	300.0	1465	4807
154	310.0	1453	4767
160	320.0	1440	4725
166	330.0	1426	4679
171	340.0	1412	4633
177	350.0	1398	4587
182	360.0	1383	4538
188	370.0	1368	4488
193	380.0	1353	4439
199	390.0	1337	4387
204	400.0	1320	4331
210	410.0	1302	4272
216	420.0	1283	4210
221	430.0	1264	4147
227	440.0	1244	4082
232	450.0	1220	4003
238	460.0	1200	3937
243	470.0	1180	3872
249	480.0	1160	3806
254	490.0	1140	3740
260	500.0	1110	3642

Specific Heat Capacity

Medium	SHC (KJ/Kg.K)
Ethanol @ 0 deg C	2.30
Ethylene Glycol	2.36
Freon R12 @ 5 deg C	0.88
Light oil @ 15 deg C	1.80
Mineral Oil	1.67
Paraffin	2.13
Propane @ 0 deg C	2.40
Water	4.18
Water (salt)	3.93

9 Specification

General

Measuring principle : Ultrasonic time difference correlation principle

Flow velocity range : 0.01 ... 25 m/s

Resolution : 0.25 mm/s

Repeatability : 0.15 % of measured value ± 0.015 m/s

Accuracy :

Volume flow

$\pm 1 \dots 3$ % of measured value depending on application,

± 0.5 % of measured value with process calibration

Flow velocity

± 0.5 % of measured value

Turn down ratio : 1/100

Gaseous and solid content of liquid media : < 10 % of volume

Flowmeter

Enclosure : Wall mounted housing

Degree of protection : IP 66 according EN 60529

Operating temperature : -10 ... 60 °C (14 ... 140 °F)

Housing material : Polycarbonate

Flow channels : 1 or 2

Power supply : 100 ... 240 V AC 50/60 Hz,

9 ... 36 V DC, special versions on request

Display : LCD graphic display, 128 x 64 dots, backlit

Dimensions : H 237 x W 258 x D 146 mm without cable glands

Weight : Approx. 2.3 kg

Power consumption : < 10 W

Signal damping : 0 ... 99 s

Measurement rate : 1Hz standard, higher rates on application

Operating languages : English, 2 other (as requested and subject to availability)

Response time : 1 s, faster rates upon request

Calculation functions : Average/difference/sum

Quantity and units of measurement

Volumetric flow rate : m³/h, m³/min, m³/s, l/h, l/min, l/s, USgal/h (US gallons per hour),

USgal/min, USgal/s, bbl/d (barrels per day), bbl/h, bbl/min, bbl/s.

Flow velocity : m/s, ft/s, inch/s

Mass flow rate : g/s, t/h, kg/h, kg/min

Volume : m³, l, gal (US gallons), bbl

Mass : g, kg, t

Heat flow : W, kW, MW (only with heat quantity measurement option)

Heat quantity : J, kJ, MJ (only with heat quantity measurement option)

Sig dB (signal), noise dB, SNR,

C m/s (sound speed), CU (housing temperature)

Tin, Tout (inlet and outlet temperature)

Internal data logger

Storage capacity : In excess of 1 million data points (16MB)

Logging data : Up to ten selected variables

Communication

Serial interface : RS 232, RS 485 (optional)

Data : Instantaneous measured value, parameter set and configuration, logged data

KATdata+ Software

Functionality : Downloading of measured values/parameter sets, graphical presentation, list format, export to third party software, on-line transfer of measured data

Operating systems : Windows 2000, NT, XP, Vista, 7, 8, 10; Linux; Mac (optional)

Process inputs / Process Outputs (maximum of ten per instrument)

Inputs

Temperature : PT 100, three or four-wire circuit, measuring range - 50 ... 400 °C, resolution 0.1K, accuracy ± 0.2 K
Current : 0 ... 20 mA active or 4 ... 20 mA passive, $U = 30$ V, $R_i = 50$ Ohm, accuracy 0.1 % of MV

Outputs

Current : 0/4 ... 20 mA, active ($R_{Load} < 500$ Ohm), 16 bit resolution, $U = 30$ V, accuracy = 0.1 %
Voltage : On request, 0 ... 10 V, $R_i = 500$ Ohm
Frequency : On request
Digital (Optical - Open Collector) : $U = 24$ V, $I_{max} = 4$ mA
Digital (relay) : Form C (SPDT-CO) contacts, $U = 48$ V, $I_{max} = 250$ mA

Clamp-on sensors

Type K1L, K1N, K1E

Diameter range : 50 ... 3000 mm
Dimensions : 60 x 30 x 34 mm
Material : Stainless steel
Temperature range :
Type K1N: -30 ... 130 °C (-22 ... 266 °F)
Type K1E: -30 ... 250 °C (-22 ... 482 °F), for short periods up to 300 °C (572 °F)
Degree of protection : IP 66 acc. EN 60529, IP 67 and IP 68 optional

Type K4L, K4N, K4E

Diameter range : 10 ... 250 mm
Dimensions : 43 x 18 x 22 mm
Material : Stainless steel
Temperature range :
Type K4N: -30 ... 130 °C (-22 ... 266 °F)
Type K4E: -30 ... 250 °C (-22 ... 482 °F), for short periods up to 300 °C (572 °F)
Degree of protection : IP 66 acc. EN 60529, IP 67 and IP 68 optional

Type K1Ex, K4Ex

(for use in hazardous areas Zone 1 or 2)

Diameter range :
Type K4Ex: 10 ... 250 mm
Type K1Ex: 50 ... 3000 mm
Dimensions : 60 x 30 x 34 mm
Material : Stainless steel
Temperature range : -20 ... 120 °C
Degree of protection : IP 66 acc. EN 60529
Protection concept : Encapsulation
Certification code : Ex mb IIC T4 - T6

The sensors are suitable for use in hazardous areas classified as Zone 1 and 2. The transmitter unit must be placed in the safe area or suitable enclosure.

10 Index

Acoustic coupling gel	17	Negative separation distance	13
Analogue current input	37	Outer Diameter	24
Analogue current output	35	Output Configuration	34
Analogue frequency output	36	Output settings	34
Analogue voltage output	35	Packaging	9
Certificate of Conformity	51	Passes	24
Commissioning	28	Pipe material selection	23
Customer Return Note (CRN)	52	Pipe parameters	23
Datalogger	26	Pipe preparation	13
Diagnostic displays	26	Process value	25
Diagnostics	34	PT100 inputs	37
Diagonal mode	13	Quick Start	23
Digital open collector output	36	Reflection mode	13
Digital relay output	36	Retaining clip (sensor mounting)	18
Dimensions	14	Return Policy	6
Display	22	RS 232	34
Display icons	22	Safety	5
Display settings	34	Scope function	38
Disturbance sources	11	Sensor configuration	13
Dual channel calculations	38	Sensor Location	10
Dual channel display mode	27	Sensor mounting	17
Electrical connections	16	Sensor mounting fixtures	18
Error messages	40	Sensor placement screen	25
Fluid selection	24	Sensor Separation	13
Fluid temperature	24	Serial interface	34
HART compatible output	35	Setup Wizard	23
Heat quantity measurement	37	SOS (Speed of Sound)	37
Identification of components	9	Sound passes	24
Input configuration	37	Sound velocity measurement	38
Installation	9	Specification	48
Keypad	20	Storage	9
Keypad function	20	Switching on / off	20
Legislative requirements	6	System configuration	8
Liner material	24	Totalizer	26
Maintenance	39	Transit-time method	7
Maths functions	38	Troubleshooting	40
Measurements	25	Units of measurement	23
Measuring principle	7	Wall thickness	24
Menu structure	28	Warranty	6
MODBUS	34	Wizard (quick setup)	23

Appendix A

Certificate of Conformity



Declaration of Conformity

We, Katronic Technologies Ltd., declare under our sole responsibility that the products listed below to which this declaration relates are in conformity with the EEC directives:

EMC Directive 2014/30/EU for Electromagnetic Compatibility
Low Voltage Directive 2014/35/EU for Electrical Safety

Description of products:

Ultrasonic flowmeters: KATflow 100, 150, 170, 200, 210 and 230 with associated KATRONIC transducers

The mentioned products are in conformity with the following European Standards:

Class	Standard	Description
<u>EMC Directive</u>	BS EN 61326-1:2013	Electrical equipment for measurement, control and laboratory use - EMC requirements
<u>Immunity</u>	BS EN 61326-1:2013	Electrical equipment for continuous unattended use
	BS EN 61000-4-2:2009	Electrostatic discharge
	BS EN 61000-4-3:2006	RF field
	BS EN 61000-4-4:2012	Electric fast transient/burst
	BS EN 61000-4-5:2014	Surge
	BS EN 61000-4-6:2014	RF conducted
<u>Emission</u>	BS EN 61000-4-11:2004	AC mains voltage dips and interruption
	BS EN 61326-1:2013	Electrical equipment Class B
<u>Low Voltage Directive</u>	BS EN 55022:2010	Disturbance voltage Class B
	BS EN 61010-1:2010	Safety requirements for electrical equipment for measurement, control and laboratory use

Coventry, 20th April 2016

For and on behalf of Katronic Technologies Ltd.

Andrew Sutton
Managing Director

Katronic Technologies Ltd.
Eafa Court, Warwick Street,
Coventry CV5 6ET
United Kingdom

Tel: +44 (0)2476 714 111
Fax: +44 (0)2476 715 448
mail@katronic.co.uk
www.katronic.co.uk

VAT No. GB 668 0907 69
Registered in England No. 3296028
Registered offices shown



Registered in England No. 3296028 • Registered Office as above

eg. No. GB03/56000

Appendix B

Customer Return Note (CRN)



Company Address
 Name
 Tel. No.
 E-mail

Instrument model Katronic contract no.
 Serial number (if known)
 Sensor type(s)
 Sensor serial number(s)

The enclosed instrument has been used in the following environment (please ✓):

Nuclear radiation ☐
 Water-endangering ☐
 Toxic ☐
 Caustic ☐
 Biological ☐
 Other (please specify)

We confirm (* delete if not applicable)

- that we have checked the instrument and sensors are free of any contamination*,
- neutralised, flushed and decontaminated all parts which have been in contact with hazardous substances and/or environments*,
- that there is no risk to man or environment through any residual material.

Date
 Signature
 Company stamp



**THORNE &
DERRICK**
 INTERNATIONAL

Thorne & Derrick
 +44 (0) 191 410 4292
 www.heatingandprocess.com