Instructions - XT-402, XT-404, XT-406 Floodbank Frame



Attach XT Handlamps to holder in frame as illustrated.




Release XT

Handlamps

from holder

in frame as

illustrated.

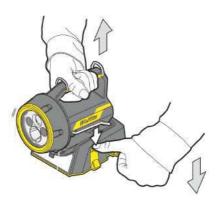

Adjust Beam direction by loosening and tightening the wing bolt.



Tighten to lock in position



WARNING: Plastic Holders are Potential Static Hazard.

Clean only with a Damp Cloth. No Detergents or Chemicals

Disposal of packaging and associated parts should be carried out in accordance with national regulations.

USE ONLY GENUINE WOLF REPLACEMENT PARTS

The Wolf Safety Lamp Co. Ltd has a policy of continuous product improvement. Changes in design details may be made without prior notice.

Wolf Safety Lamp Company
Saxon Road Works, Sheffield, S8 0YA
Tel: +44 114 255 1051 Fax: +44 114 255 7988
E-mail: info@wolf-safety.co.uk Website: www.wolf-safety.co.uk





XT-489 ISSUE 1 DF-357