



Picture quality

Picture quality is indicated by the LEDs (below). All pictures are stored as occasionally conditions mean it is not possible to get a perfect picture and a poor one is better than no picture. However it is strongly recommended that another picture is taken.

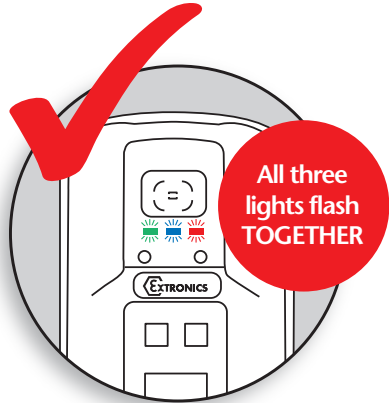

Good picture

To indicate a good picture has been taken, all three lights flash TOGETHER three times and you will hear a beep

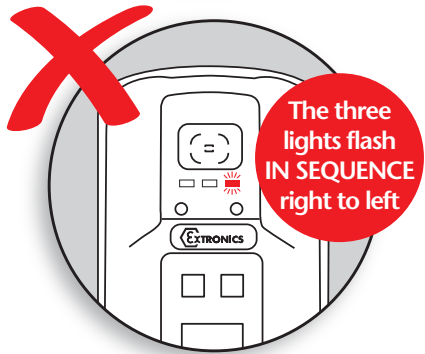


Bad picture

To indicate a bad picture, the three lights flash IN SEQUENCE three times from right to left i.e. red, blue, green etc.

Using the flash


Press the flash button and the red LED will start to flash. The LED will become solid indicating the flash is ready for use. The green LED flashing slowly indicates low battery. Once enabled - the flash function is automatic i.e. will only operate in low light conditions

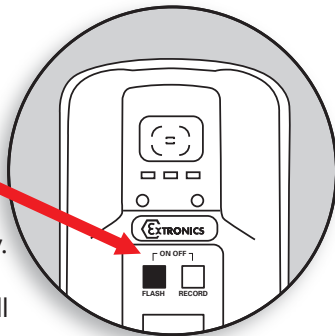

Voice record function


Allows a voice message to be associated with a picture. Press record button - blue LED indicates feature enabled. Take a picture in the usual way but CONTINUE to hold the picture button.

When the blue light flashes, record your message and release picture button when finished.

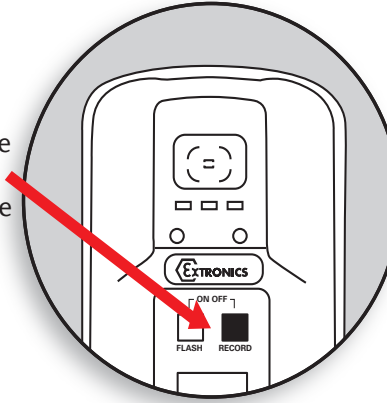

Downloading pictures

Simply turn on the iCAM501U, connect the USB cable to a Windows 7 /Vista or XP PC and follow the on-screen instructions.

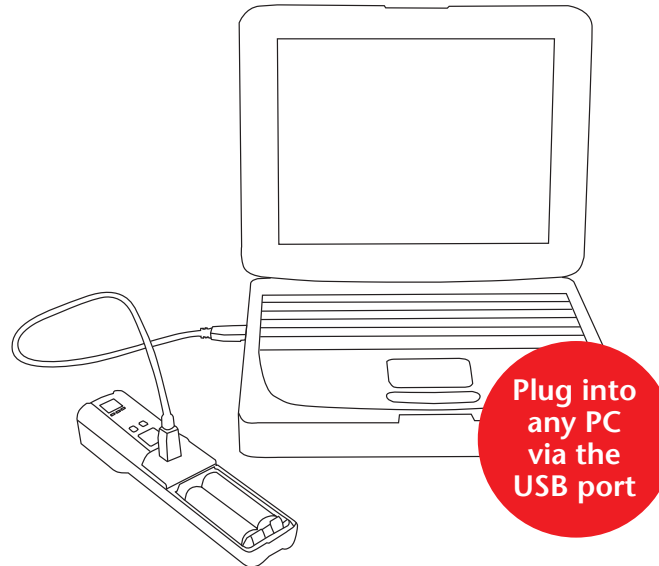

THORNE &
DERRICK
INTERNATIONAL

Thorne & Derrick
+44 (0) 191 410 4292
www.heatingandprocess.com



Vision Technologies

iCAM 50x Quick Start Guide

This quick start guide explains how to use the camera and its various functions. For Safety Instructions please refer to instructions enclosed with your iCAM50x.

Package Contents

- iCAM50x camera
- Safety Instructions
- Two approved AA batteries
- Internal USB lead
- 1 lanyard



Tel +44 (0)845 277 5000
www.extronics.com


iCAM50x

Preparing for use

The iCAM50x is shipped with a protective film fitted to the front and rear windows. This should be carefully removed before use.


The iCAM50x may be used with the protective rubber overboot supplied. Only the rubber overboot supplied by Extronics should be used as it is made from electrostatically-dissipative material.

Remember - Remove ALL plastic coverings from the lens & viewfinder before taking pictures

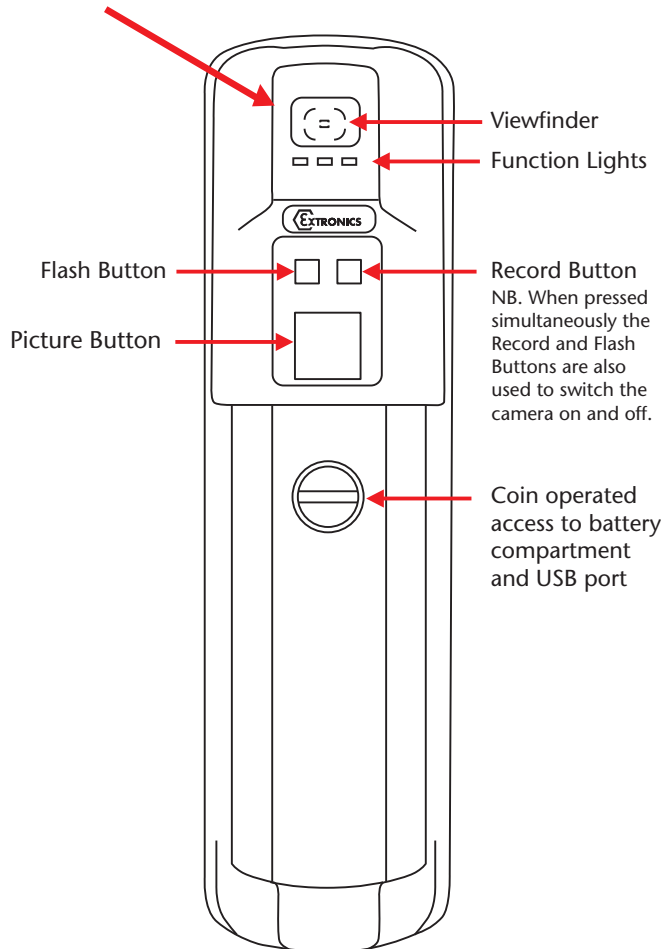


Inserting the battery


To change or install the batteries in the iCAM50x, turn the screw as indicated below to remove the cover

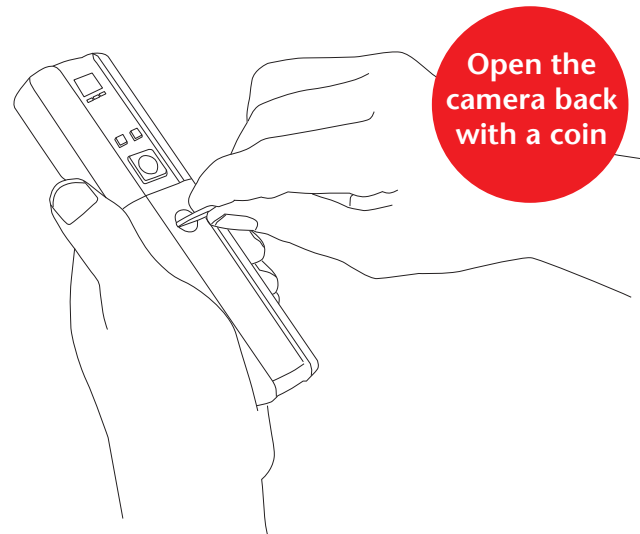

Install the batteries in the correct orientation (indicated on the enclosure) and close the lid again. **PLEASE NOTE: Only those batteries listed in the Safety Instructions can be used.**

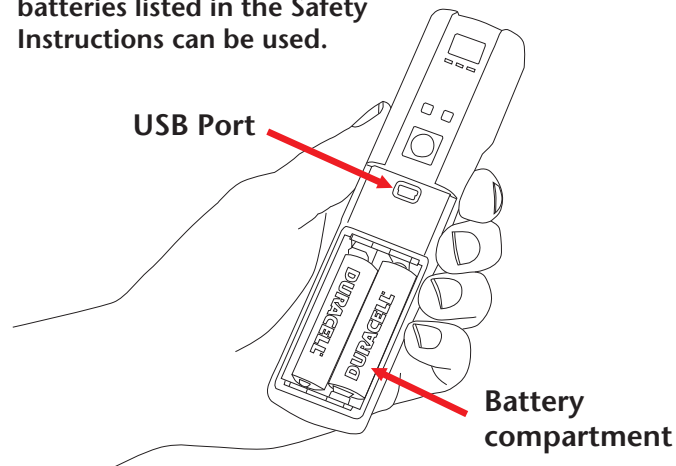

Switching the camera on and off

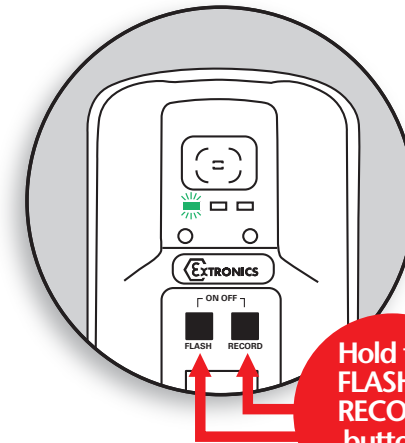

Green LED will flash rapidly for ~10 seconds & the Blue and Red LED will flash briefly. The Green LED then goes solid when ready. The green LED flashing slowly indicates a low battery level

Taking a picture

1. Press and hold picture button until green LED starts flashing rapidly.
2. Wait for green LED to stop flashing before moving

