
Conductive

VEGAKON 61 VEGAKON 66 Probes EL 1, 3, 4, 6,



## **Product Information**



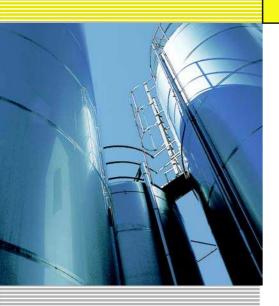

Thorne & Derrick 7 Thorne & Derr





## Content

1	Description of the measuring principle
2	Type overview 4
3	Mounting instructions
4	Electrical connection
5	4.1 Preparing the connection       8         4.2 Wiring schematic 61, 66       8         4.3 Wiring plan EL 1, EL 3, EL 4, EL 6, EL 8       9         Operation       9
	5.1       Adjustment elements 61 R, 61 T.       11         5.2       Adjustment elements 66 R, 66 T.       11         5.3       Adjustment probes EL 1, EL 3, EL 4, EL 6, EL 8.       12         Technical data       13
7	Dimensions
8	Product code

## $\langle \cdot \rangle$

### Take note of safety instructions for Ex applications

Please note the Ex specific safety information which you can find on our homepage <a href="www.vega.com\services\downloads">www.vega.com\services\downloads</a> and which comes with every instrument. In hazardous areas you should take note of the appropriate regulations, conformity and type approval certificates of the sensors and power supply units. The sensors must only be operated on intrinsically safe circuits. The permissible electrical values are stated in the certificate.

## 1 Description of the measuring principle

#### Measuring principle

Conductive probes are used for level detection in conductive liquids.

The instruments are designed for industrial use in all areas of process technology.

Conductive probes detect the product resistance when their electrodes get covered by the product. A small alternating current, measured continuously by the electronics of the compact instrument or a separate signal conditioning instrument, is checked for amplitude and phase position and converted into a switching signal.

A conductive probe consists of a ground electrode and a levelrelated measuring electrode.

The switching signal is determined by the length or mounting position of the respective measuring electrode.

In conductive vessels, the vessel wall can be used as the ground electrode. The measuring probe can then consist of only one measuring electrode.

The sensors are maintenance free and rugged and can be implemented in all areas of industrial measurement engineering.

## 1.1 Application examples

#### **Overflow protection**

Measuring system for detection of the max. level in an electrically conductive vessel (e.g. as overflow protection)

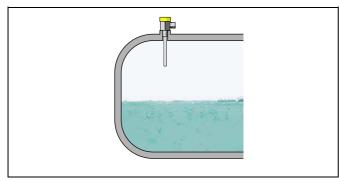


Fig. 1: Overflow protection

Simple, inexpensive level detection, e.g. as overflow protection in watery liquids.

#### Advantages:

- Easy, reliable sensors
- Small installation dimensions

#### **Pump control**

Due to the many possible ways of application, conductive level switches are ideal for all measuring tasks in connection with water and aqueous solutions. The large number of electrical and mechanical versions guarantees simple integration into existing processes.

Pump control is a frequent application in the area of water and waste water.

To empty a pump sump automatically with a pump when a certain level is exceeded and to switch the pump off again when the min. level is reached, the pump can be controlled with a conductive measuring probe.

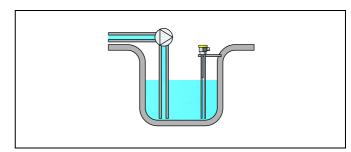


Fig. 2: Pump control with an EL 3 conductive measuring probe

#### Advantages:

• Up to five switching points with one sensor possible

#### Dry run protection in pipelines

Thanks to its virtually front-flush conical electrode, the conductive level switch VEGAKON 61 is ideal for use in pipelines. Its flow-efficient profile does not change the pipe cross section and thus prevents turbulence.

The VEGAKON 61 measures the field strength at its tip, and is thus insensitive to buildup.

VEGAKON 61 calibrates itself automatically and therefore needs no adjustment.

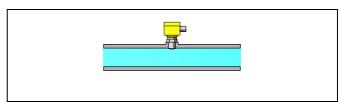


Fig. 3: Dry run protection in pipelines

#### Advantages:

- Insensitive to buildip
- Adjustment free
- Causes no turbulence
- Does not change pipe cross sectional area
- Robust and abrasion resistant



## 2 Type overview

#### **VEGAKON 61**



Preferred application: Conductive liquids, pipelines

Version: Compact level switch, partly insulated

Insulation: PTFE

Length: -

Process fitting: Thread G1 A, conus, Tuchenhagen Process temperature:  $-40 \dots +150 \,^{\circ}\text{C} \, (-40 \dots +302 \,^{\circ}\text{F})$ 

Process pressure: -1 ... 25 bar/-100 ... 2500 kPa (-14.5 ... 363 psi)

#### **VEGAKON 66**



Conductive liquids

Compact level switch, rod - partly insulated

PP

0.12 ... 4 m (0.394 ... 13.12 ft)

Thread G11/2 A

-40 ... +100 °C (-40 ... +212 °F)

-1 ... 6 bar/-100 ... 600 kPa (-14.5 ... 87 psi)

EL 1



Preferred application: Conductive liquids

Version: 1) Rod - partly insulated

Insulation: PTFE

Length: 0.04 ... 4 m (0.131 ... 13.12 ft)

Process fitting: Thread G½ A

Process temperature:  $-50 \dots +130 \, ^{\circ}\text{C} \, (-58 \dots +266 \, ^{\circ}\text{F})$ 

Process pressure: -1 ... 63 bar/-100 ... 6300 kPa

(-14.5 ... 914 psi)

EL 3



Conductive liquids

Rod - partly insulated

PTFE

0.1 ... 4 m (0.328 ... 13.12 ft)

Thread G11/2 A

-50 ... +130 °C (-58 ... +266 °F)

-1 ... 63 bar/-100 ... 6300 kPa

(-14.5 ... 914 psi)

EL 4



Conductive liquids

Rod - partly insulated

PP

0.1 ... 4 m (0.328 ... 13.12 ft)

Thread G1½ A

-20 ... +100 °C (-4 ... +212 °F)

-1 ... 6 bar/-100 ... 600 kPa

(-14.5 ... 87 psi)

For connection to a VEGATOR signal conditioning instrument.

EL 6





EL8

Preferred application: Conductive liquids

Version:<sup>2)</sup> Cable - partly insulated

Insulation: FEP

Length: 0.22 ... 50 m (0.722 ... 164.04 ft)

Process fitting: Thread G1½ A

Process temperature: -20 ... +100 °C (-4 ... +212 °F)

Process pressure: -1 ... 6 bar/-100 ... 600 kPa (-14.5 ... 87 psi)

Conductive liquids

Rod - partly insulated

PΕ

0.03 ... 1 m (0.098 ... 3.281 ft)

Thread G1/2 A

-10 ... +60 °C (+14 ... +140 °F)

-1 ... 6 bar/-100 ... 600 kPa (-14.5 ... 87 psi)

<sup>&</sup>lt;sup>2)</sup> For connection to a VEGATOR signal conditioning instrument.



## 3 Mounting instructions

#### **Switching point**

Mount the probe in such a way that the rod or cable electrodes do not touch the vessel wall during operation.

#### **Agitators**

Due to agitators, vibrations or similar, the probe can be subjected to strong lateral forces.

Excessive system vibration or shocks, e.g. caused by agitators or turbulence in the vessel (e.g. from fluidisation) can cause the rod probe to vibrate in resonance. This can lead to increased material stress. Should a longer rod probe be necessary, you can provide a suitable insulated support or guy directly above the end of the probe to stabilise it.

In case of strong product movements, foam generation and flow in the vessel, the probe can be also mounted in bypass tubes.

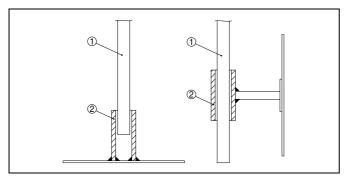


Fig. 4: Fasten the probe

- 1 Probe
- 2 Plastic socket on the probe end
- 3 Probe
- 4 Plastic socket laterally mounted

#### Inflowing medium

If the conductive sensors are mounted in the filling stream, unwanted false measuring signals may be triggered. For this reason, mount the instruments at a position in the vessel where no disturbances, e.g. from filling openings, agitators, etc., can occur.

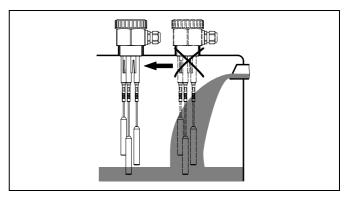


Fig. 5: Inflowing medium

#### Pressure/Vacuum

The process fitting must be sealed if there is gauge or low pressure in the vessel. Check if the seal material is resistant against the measured product and the process temperature.

Insulating measures in metal vessels such as e.g. covering the thread with teflon tape can interrupt the necessary electrical connection to the vessel. Ground the probe on the vessel.

#### Shorten the probe

The rods of the probe can be shortend individually.

#### **Metal vessel**

If probes without ground electrode are used, you must make sure that the mechanical connection of the probe is connected electrically conductive to the vessel to ensure sufficient grounding.

Use conductive seals such as e.g. copper, lead etc.

Insulating measures such as e.g. covering the thread with teflon tape can interrupt the necessary electrical connection. If this is necessary, use the ground terminal on the housing to connect the instrument with the vessel.

A ground electrode must be provided for probes EL 4 and 6 as well as with VEGAKON 66.

#### Non-conductive vessels

Generally use probes with a ground electrode in non-conductive vessels, e.g. plastic tanks.

#### **Horizontal mounting**

If you mount a VEGAKON 66 laterally, we recommend mounting it approx.  $20^{\circ}$  inclined so that the liquid medium can drain off more easily and no buildup can generate on the isolation.

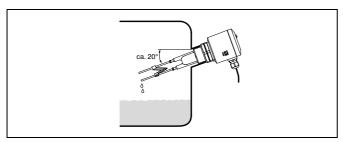


Fig. 6: Horizontal mounting

## **Ground connection**

If probes without ground electrode are used, you must make sure that the mechanical connection of the probe is connected electrically conductive to the vessel to ensure sufficient grounding.

Use conductive seals such as e.g. copper or lead etc. Insulating measures, such as covering the thread with Teflon tape, can interrupt the necessary electrical connection with metal vessels. For this reason, ground the probe on the vessel or use a conductive seal material.



## 4 Electrical connection

### 4.1 Preparing the connection

#### Note safety instructions

Always keep in mind the following safety instructions:

• Connect only in the complete absence of line voltage

#### Take note of safety instructions for Ex applications



In hazardous areas you should take note of the appropriate regulations, conformity and type approval certificates of the sensors and power supply units.

#### Select power supply

Connect the power supply according to the following diagrams. Oscillator with relay output is designed in protection class 1. To maintain this protection class, it is absolutely necessary that the ground conductor be connected to the internal ground terminal. Take note of the general installation regulations. As a rule, connect VEGAKON to vessel ground (PA), or in case of plastic vessels, to the next ground potential. On the side of the housing there is a ground terminal between the cable entries. This connection serves to drain off electrostatic charges. In Ex applications, the installation regulations for hazardous areas must be given priority.

The data for voltage supply are specified in chapter "Technical data".

#### Selecting connection cable

VEGAKON and probes EL are connected with standard cable with round cross section. An outer cable diameter of 5 ... 9 mm (0.2 ... 0.35 in) ensures the seal effect of the cable gland.

If cable with a different diameter or wire cross section is used, exchange the seal or use an appropriate cable connection.



In hazardous areas, only use approved cable connections for approved instruments.

#### Select connection cable for Ex applications



Take note of the corresponding installation regulations for Ex applications.

## 4.2 Wiring schematic VEGAKON 61, 66

#### Relay output

Is used to switch external voltage sources to relays, contactors, magnetic valves, horns etc.

We recommend connecting VEGAKON in such a way that the switching circuit is open when there is a level signal, line break or failure (safe condition).

The relays are always shown in non-operative condition.

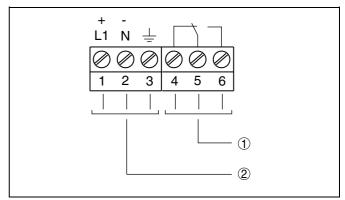


Fig. 7: VEGAKON 61 - electronics with relay output

- 1 Relay output
- 2 Power supply

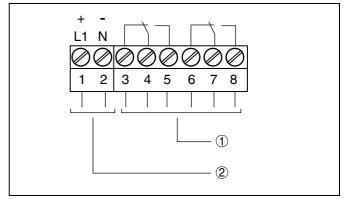


Fig. 8: VEGAKON 66 - electronics with relay output

- 1 Relay output
- 2 Power supply

#### **Transistor output**

Is used to switch external voltage sources to relays, contactors, magnetic valves, horns etc.

We recommend connecting VEGAKON in such a way that the switching circuit is open when there is a level signal, line break or failure (safe condition).

The instrument is used to control relays, contactors, magnet valves, warning lights, horns as well as PLC inputs.

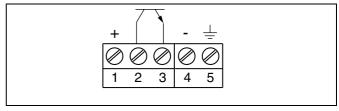


Fig. 9: VEGAKON 61 - transistor output

Fig. 10: VEGAKON 66 - transistor output

The transistor switches the supply voltage of the electronic module to the binary input of a PLC or an electrical load. Through different connections of the consumer (load), PNP or NPN action can be attained.

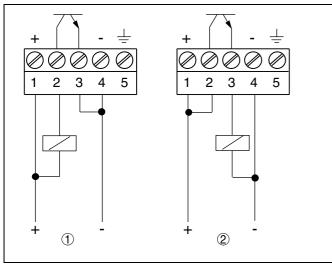


Fig. 11: VEGAKON 61 - electronics with transistor output

- 1 NPN action
- 2 PNP action

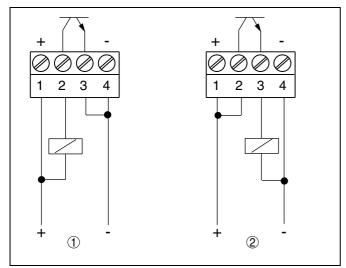


Fig. 12: VEGAKON 66 - electronics with transistor output

- 1 NPN action
- 2 PNP action

## 4.3 Wiring plan EL 1, EL 3, EL 4, EL 6, EL 8

#### For connection to a signal conditioning instrument

You can find the electrical connection of VEGAKON in the product information manual "Signal conditioning instruments for conductive electrodes".

You will find suitable signal conditioning instruments in chapter "Technical data".

#### Selecting connection cable

To ensure the seal effect of the cable gland, VEGAKON is connected with standard cable with round cross-section. The outer diameter of the cable is stated in chapter "*Technical data*".

#### Line monitoring

To realize a line monitoring, a resistor of 220 k $\Omega$  must be integrated in the connection housing of the probe between terminal 1 and 2

When a fault message is generated, the switching output is simultaneously activated.

If a fault message is not wanted, a bridge must be provided on the signal conditioning instrument instead of the resistor in the connection housing of the probe.

The line monitoring is thus deactivated and the fault message rendered invalid.



With Ex versions, this resistor of 220 k $\Omega$  is already integrated Ex factory in the connection housing of the probe. The Ex measuring system (max. and ground connection cable of the probe to the signal conditioning instrument) is generally monitored for line break.

- Terminal 1 = longest rod (ground)
- Terminal 2 = shortest rod (max.)



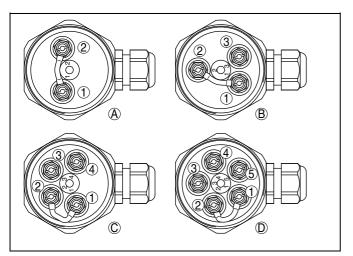


Fig. 13: Connection compartment of the probe - 220 k $\Omega$  resistor between terminals 1 and 2

- Connection terminal 1 = longest rod Connection terminal 2 = shortest rod
- 2 A B C D Probe with 2 rods
- Probe with 3 rods
- Probe with 4 rods
- Probe with 5 rods

## 5 Operation

## 5.1 Adjustment elements VEGAKON 61 R, 61 T

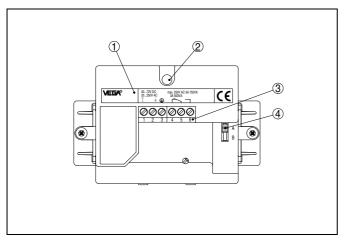


Fig. 14: Electronics module VEGAKON 61 R (relay output)

- 1 Type label
- 2 Signal lamp (LED)
- 3 Connection terminals
- 4 Mode switch (A/B)

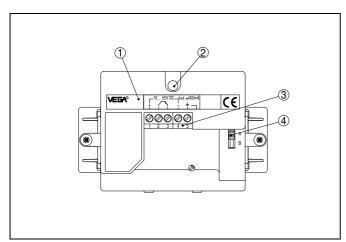


Fig. 15: Electronics module VEGAKON 61 T (transistor output)

- 1 Type label
- 2 Signal lamp (LED)
- 3 Connection terminals
- 4 Mode switch (A/B)

#### Mode adjustment (4)

With the mode adjustment (A/B) you can change the switching condition of the output. It allows you to set the required mode (A -  $\max$  detection or overfill protection, B -  $\min$  detection or dry run protection).

#### Signal lamp (2)

The signal lamp shows the switching status of the output and can be checked with closed housing.

## 5.2 Adjustment elements VEGAKON 66 R, 66 T

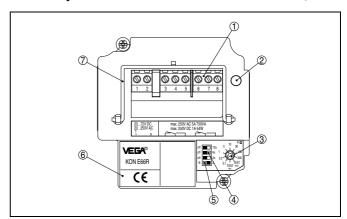


Fig. 16: Electronics module VEGAKON 66 R (relay output)

- 1 Connection terminals
- 2 Signal lamp (LED)
- 3 Rotary switch: Adjustment of the conductivity value
- 4 Selection switch: Integration time
- 5 Selection switch: Mode (A/B) VEGAKON
- 6 Type label
- 7 Tensile proving ring

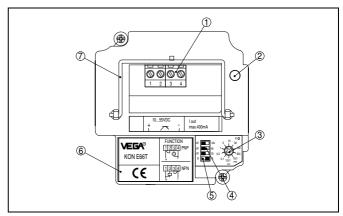


Fig. 17: Electronics module VEGAKON 66 T (transistor output)

- 1 Connection terminals
- 2 Signal lamp (LED)
- 3 Rotary switch: Adjustment of the conductivity value
- 4 Selection switch: Integration time
- 5 Selection switch: Mode (A/B) VEGAKON
- 6 Type label
- 7 Tensile proving ring

#### Signal lamp (2)

The signal lamp shows the switching status of the output and can be checked with closed housing.

#### Rotary switch: Adjustment of the conductivity value (3)

With the rotary switch you can adjust the sensitivity of the instrumet. Position 0.1 k $\Omega$  is less sensitive and switch position 300 k $\Omega$  is most sensitive.



#### Selection switch: Integration time (4)

There are three switches on the DIL switch block by which you can adjust the switching on and off delay. Thus prevents, e.g. the instrument from permanent switching if the level is within the limits.

The delay refers to the switching status of both relay outputs.

With the switches (2 s, 6 s, 12 s) you can set the integration time respectively in the range of 0 to 20 seconds. The times of the activated timers add up. If e.g. the switches 2 s and 12 s are activated, the integration time will be 14 s.

## Mode adjustment (5)

With the mode adjustment (A/B) you can change the switching condition of the output. You can set the required mode (A - max. detection or overfill protection, B - min. detection or dry run protection).

## Tensile proving ring (7)

Loosen the holding screws of the electronics module. Fold the tensile proving ring upward. With the tensile proving ring you can pul the electronics module out of the instrument housing.

# 5.3 Adjustment probes EL 1, EL 3, EL 4, EL 6, EL 8

The adjustment of probes EL is carried out via a suitable signal conditioning instrument. The adjustment possibilities are specified in the product information manual "Signal conditioning instruments for conductive probes".

316Ti

316Ti 316Ti

**PTFE** 

316Ti

316L

Silicone

600 g (21 oz)

150 g (5.3 oz)

G1 A (PN 25)

DN 25 (PN 25)

Klingersil C-4400

550 g (19.4 oz)

G11/2 A (PN 25)

850 g (30 oz) 100 g/m (1.1 oz/ft)

Plastic PBT (polyester), Alu die-casting powder-coated

1 V<sub>ss</sub>, 5 kHz

< 1 mA

PP

316Ti

316Ti

Silicone 316L

Klingersil C-4400

plastic PBT (Polyester)



## 6 Technical data

#### General data

Material 316L corresponds to 1.4404 or 1.4435

#### **VEGAKON 61**

Materials, wetted parts

- Process fitting - thread

- Process fitting - Cone

ElectrodeInsulation ring

- Process seal

Materials, non-wetted parts

HousingTemperature adapter

Seal between housing and housing cover

Ground terminal

Weight

Basic weightTemperature adapter

Process fittings

ThreadCone

- Tuchenhagen

Measurement voltage Measurement current

#### **VEGAKON 66**

Materials, wetted parts

- Process fitting - thread

- Electrode

Process seal
 Materials, non-wetted parts

Housing

- Temperature adapter

- Seal between housing and housing cover

- Ground terminal

Weight

with plastic housingwith Aluminium housing

Electrode

Probe length

Insulation length (L1 ... L5)

Process fittings

Thread

Measurement voltage Measurement current

#### EL 1

Materials, wetted parts

Process fitting - threadProcess fitting

- Process seal

- insulation (partly insulated)

- Electrode (rod PTFE partly insulated: ø 10 mm/0.394 in)

Materials, non-wetted parts

HousingHousing cover

- Seal between housing and housing cover

- Cable gland

Process fitting Weight

Basic weightRod weight: ø 10 mm (0.394 in)

Sensor length (L)
Insulation length (L1)

316L 316L

 $3\,V_{\text{eff}}$ 

< 3 mA

Klingersil C-4400

PTFE

316L, Hastelloy C4 (2.4610)

0.12 ... 4 m (0.394 ... 13.12 ft)

0.12 ... 4 m (0.394 ... 13.12 ft)

316L PBT NBR

brass nickel-plated

G1/2 A

400 g (14 oz) 400 g/m (4.3 oz/ft) 0.04 ... 4 m (0.13 ... 13 ft) 0.04 ... 4 m (0.13 ... 13 ft)

Conductive - Level detection in liquid

G11/2 A

PP

#### EL3

Materials, wetted parts	
<ul> <li>Process fitting - thread</li> </ul>	316Ti
<ul> <li>Process fitting</li> </ul>	316Ti
<ul> <li>Process seal</li> </ul>	Klingersil C-4400
<ul> <li>insulation (partly insulated)</li> </ul>	PTFF

- Probe (rod PTFE partly insulated: ø 6 mm/0.236 in) 316Ti, Hastelloy C4 (2.4610)

Materials, non-wetted parts

- Housing 316Ti - Housing cover **PBT** - Seal between housing and housing cover **NBR** brass nickel-plated

- Cable gland Process fitting

Weight

- Basic weight

900 g (32 oz) - Rod weight: ø 6 mm (0.236 in) 220 g/m (2.4 oz/ft) Sensor length (L1 - L5)

0.1 ... 4 m (0.328 ... 13.12 ft)

Insulation length 78 mm (3.071 in)

#### EL 4

Materials, wetted parts PP - Process fitting - thread - Process fitting PP

- Process seal Klingersil C-4400

- insulation (partly insulated) - Electrode (rod PP partly insulated: ø 4 mm/0.157 in) 316Ti, Hastelloy C4 (2.4610)

Materials, non-wetted parts

- Housing - Housing cover PBT - Seal between housing and housing cover **NBR** - Cable gland PΑ G11/2 A

Process fitting Weight

- Basic weight

400 g (14 oz) - Rod weight: ø 4 mm (0.157 in) 100 g/m (1.1 oz/ft)

Sensor length (L1 - L5) 0.1 ... 4 m (0.328 ... 13.12 ft) 78 mm (3.071 in) Insulation length

#### EL 6

Materials, wetted parts - Process fitting - thread

- Process fitting PP - Process seal

Klingersil C-4400 - insulation (partly insulated) FEP

- Probe (cable FEP partly insulated: ø 2.5 mm/0.098 in) 316Ti

Materials, non-wetted parts

PΡ - Housing - Housing cover PBT - Seal between housing and housing cover **NBR**  Cable gland PA G11/2 A

Process fitting Weight

- Basic weight 500 g (17.6 oz) - Rod weight: ø 2.5 mm (0.098 in) 40 g/m (0.4 oz/ft)

Sensor length (L1 - L5) 0.22 ... 50 m (0.722 ... 164.04 ft)

Insulation length 78 mm (3.071 in)

#### EL8

Materials, wetted parts

- Process fitting - thread 1.4301 1.4301 - Process fitting

- Process seal Klingersil C-4400

- insulation (partly insulated) PΕ - Electrode (rod PE partly insulated: ø 4 mm/0.157 in) 316Ti



Materials, non-wetted parts

HousingProcess fittingWeight

- Basic weight

- Rod weight: ø 4 mm (0.157 in)

Sensor length (L) Insulation length

EPDM G½ A

> 100 g (3.5 oz) 100 g/m (1.1 oz/ft)

0.03 ... 1 m (0.098 ... 3.281 ft)

27 mm (1.063 in)

#### **Output variable**

#### **VEGAKON 61 R**

Output

Turn-on voltage

Min.

- Max.

Switching current

- Min.

- Max.

Breaking capacity

- Min.

- Max.

Contact material (relay contacts)

Modes (adjustable)

AB

Integration time approx.

#### **VEGAKON 61 T**

Output

Max. turn-on voltage Max. switching current Voltage loss on the transistor

Blocking current Modes (adjustable)

- A

- B

Integration time approx.

#### **VEGAKON 66 R**

Output

Turn-on voltage

– Min.

- Max.

Switching current

- Min.

– Max.

Breaking capacity

- Min.

- Max.

Contact material (relay contacts)

Modes (adjustable)

– A – B

Integration time approx.

Relay output (DPDT), 1 floating spdt

10 mV

253 V AC, 60 V DC

10 μA

2 A AC, 1 A DC

50 mW

125 VA AC, 54 W DC

If inductive loads or stronger currents are switched through, the gold plating on the relay contact surface will be permanently damaged. The contact is then no longer suitable for switching low-level signal circuits.

AgNi or AgSnO and Au plated

Max. detection or overfill protection Min. detection or dry run protection

0.5 s

Transistor, floating, overload and permanently short-circuit resistant NPN or PNP reaction (depending on connection)

 $U_B = 55 \text{ V DC}$  $I_B = 400 \text{ mA}$ 

 $U_{\text{CE}}$  1 V at  $I_{\text{B}}$  400 mA

 $I_O < 10 \mu A$ 

Max. detection or overfill protection Min. detection or dry run protection

 $0.5\,\mathrm{s}$ 

Relay output (DPDT), 2 floating spdts

10 mV

253 V AC, 253 V DC

10 μΑ

5 A AC, 1 A DC

50 mW

750 VA AC, 54 W DC

If inductive loads or stronger currents are switched through, the gold plating on the relay contact surface will be permanently damaged. The contact is then no longer suitable for switching low-level signal circuits.

AgNi or AgSnO and Au plated

Max. detection or overfill protection Min. detection or dry run protection

 $0.5 \dots 20\,\text{s}$ 



#### **VEGAKON 66 T**

Output

Max. turn-on voltage
Max. switching current
Voltage loss on the transistor
Blocking current

Modes (adjustable)

– A – B

Integration time approx.

EL 1, EL 3, EL 4, EL 6, EL 8

Suitable signal conditioning instruments

Transistor, floating, overload and permanently short-circuit resistant NPN or PNP reaction (depending on connection)

 $U_B = 55 \text{ V DC}$  $I_B = 400 \text{ mA}$ 

 $U_{CE}$  1 V at  $I_{B}$  400 mA

 $I_0 < 10 \, \mu A$ 

Max. detection or overfill protection Min. detection or dry run protection

0.5 ... 20 s

VEGATOR 256C, 532, 631

#### **Ambient conditions**

#### **VEGAKON 61, 66**

Ambient temperature on the housing  $-40 \dots +70 \, ^{\circ}\text{C} \, (-40 \dots +158 \, ^{\circ}\text{F})$  Ambient temperature with operating voltage > 60 V DC  $-40 \dots +50 \, ^{\circ}\text{C} \, (-40 \dots +122 \, ^{\circ}\text{F})$  Storage and transport temperature  $-40 \dots +80 \, ^{\circ}\text{C} \, (-40 \dots +176 \, ^{\circ}\text{F})$  **EL 1, EL 3, EL 4, EL 6, EL 8** 

Ambient temperature on the housing  $-40 \dots +80 \,^{\circ}\text{C} \, (-40 \dots +176 \,^{\circ}\text{F})$ Storage and transport temperature  $-40 \dots +80 \,^{\circ}\text{C} \, (-40 \dots +176 \,^{\circ}\text{F})$ 

#### **Process conditions**

#### **VEGAKON 61**

Permissible product temperature

Without temperature adapter

- with temperature adapter

-40 ... +100 °C (-40 ... +212 °F) -40 ... +150 °C (-40 ... +302 °F)

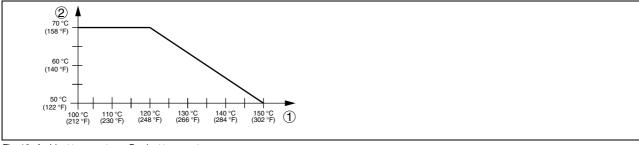


Fig. 18: Ambient temperature - Product temperature

- 1 Product temperature
- 2 Ambient temperature

Conductive of the medium

Process pressure

-1 ... 25 bar/-100 ... 2500 kPa (-14.5 ... 362 psi)

 $> 7.5 \mu S/cm$ 

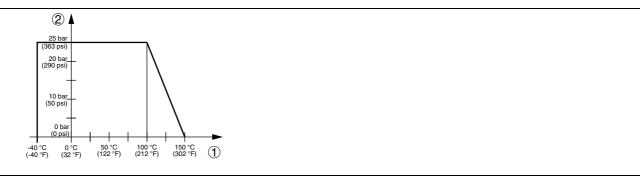


Fig. 19: Product temperature - Process pressure

- 1 Product temperature
- 2 Process pressure

#### **VEGAKON 66**

Permissible product temperature

Process pressure

Conductive of the medium

#### **EL 1, EL 3**

Process pressure

Process temperature

Conductive of the medium

#### EL 4, EL 6

Process pressure

Process temperature

Conductive of the medium

#### EL8

Process pressure

Process temperature

Conductive of the medium

#### -40 ... +100 °C (-40 ... +212 °F)

-1 ... 6 bar/-100 ... 600 kPa (-14.5 ... 87 psi)

 $> 5 \,\mu\text{S/cm}$  with 30 mm electrode covering

- ο μο/οιπ with σο min clooliode covering

-1 ... 63 bar/-100 ... 6300 kPa (-14.5 ... 914 psi)

-50 ... +130 °C (-58 ... +266 °F)

 $> 7.5 \mu S/cm$ 

-1 ... 6 bar/-100 ... 600 kPa (-14.5 ... 87 psi)

-20 ... +100 °C (-4 ... +212 °F)

 $> 7.5 \mu S/cm$ 

-1 ... 6 bar/-100 ... 600 kPa (-14.5 ... 87 psi)

-10 ... +60 °C (+14 ... +140 °F)

 $> 7.5 \mu S/cm$ 

#### Electromechanical data

#### VEGAKON 61, 66 - with relay output

Cable gland

5.5.7.5 g.s....

Screw terminals

**VEGAKON 61, 66 - with transistor output** Cable gland

Screw terminals

EL 1

Cable entry

EL 3, EL 4, EL 6 Cable entry 1 x cable entry M20 x 1.5; 1 x blind stopper M20 x 1.5 (cable gland

M20 x 1.5 is attached)

for wire cross-section up to 1.5 mm<sup>2</sup> (AWG 16)

1 x cable gland M20 x 1.5; 1 x blind stopper M20 x 1.5

for wire cross-section up to 1.5 mm<sup>2</sup> (AWG 16)

1 x cable gland M16 x 1.5 (cable: ø 5 ... 10 mm/0.2 ... 0.35 in)

1 x cable gland M20 x 1.5 (cable: ø 5 ... 9 mm/0.2 ... 0.35 in)

## Voltage supply

#### **VEGAKON 61 R**

Power consumption

Supply voltage

20 ... 253 V AC, 50/60 Hz, 20 ... 72 V DC (at U > 60 V DC, the ambient

temperature can be max. 50 °C/122 °F)

1 ... 8 VA (AC), approx. 1.3 W (DC)

**VEGAKON 61 T** 

Supply voltage 10 ... 55 V DC

Max. power consumption 0.5 W

**VEGAKON 66 R** 

Supply voltage  $20 \dots 253 \text{ V AC}, 50/60 \text{ Hz}, 20 \dots 72 \text{ V DC}$  (at U > 60 V DC, the ambient

temperature can be max. 50 °C/122 °F)

Power consumption 1 ... 9 VA (AC), approx. 1.5 W (DC)

**VEGAKON 66 T** 

Supply voltage 10 ... 55 V DC

Max. power consumption 0.5 W

#### **Electrical protective measures**

**VEGAKON 61** 

Protection IP 66

Overvoltage category III

Protection class I

**VEGAKON 66** 

Protection

Plastic housing
Aluminium housing
Overvoltage category
Protection class
IP 66
IP 66/IP 67
II
II

EL 1, EL 3, EL 4, EL 6

Protection IP 66/IP 67

EL8

Protection IP 50

## Approvals3)

**EL 1, EL 3** 

ATEX II 1G, 1/2G, 2G EEx ia IIC T6

IEC Ex ia IIC T6

WHG

Ship approval

EL 4, EL 6

IEC Ex ia IIC T6

Ship approval

## **CE** conformity

EMVG (89/336/EWG), Emission: EN 50081-1, Susceptibility:

EN 50082-2

LVD (73/23/EWG), EN 61010

<sup>&</sup>lt;sup>3)</sup> Deviating data in Ex applications: see separate safety instructions.

#### **Dimensions** 7

#### **VEGAKON 61**

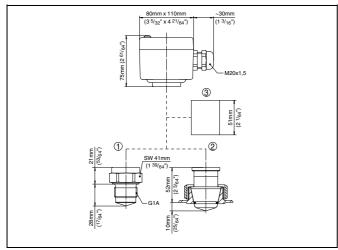


Fig. 20: VEGAKON 61

- Threaded version
- Cone version
- Temperature adapter

#### **VEGAKON 66**

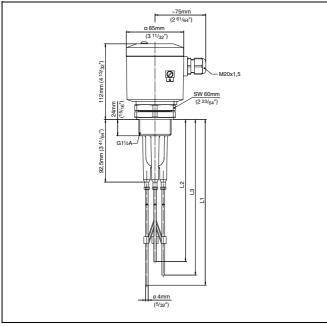


Fig. 21: VEGAKON 66 with three probes

- L1 Length ground probe L2 Length max. probe
- L3 Length min. probe

#### **EL 1**

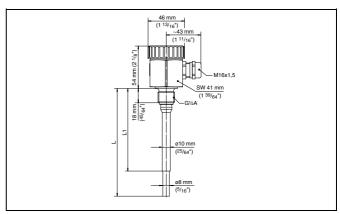


Fig. 22: Conductive rod electrode EL 1

- Sensor length, see chapter "Technical data"
- Insulation length, see chapter "Technical data"

#### EL3

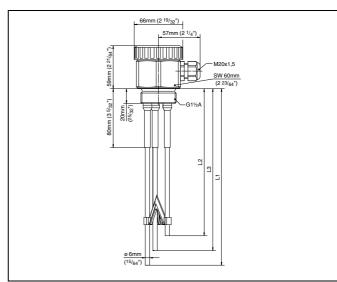


Fig. 23: Conductive multiple rod electrode EL 3

- L1 Sensor length, see chapter "Technical data"
   L2 Sensor length, see chapter "Technical data"
   L3 Sensor length, see chapter "Technical data"

## EL 4

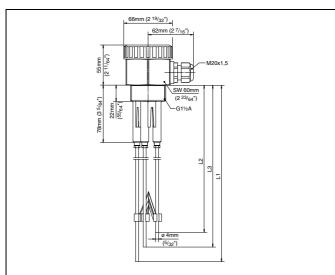


Fig. 24: Conductive multiple rod electrode EL 4

- L1 Sensor length, see chapter "Technical data"
   L2 Sensor length, see chapter "Technical data"
   L3 Sensor length, see chapter "Technical data"

## EL 6

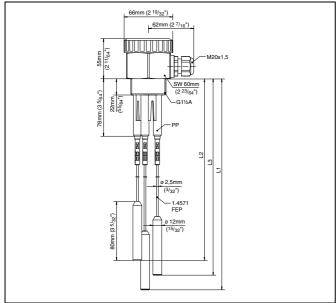


Fig. 25: Conductive multiple cable electrode EL 6

- Sensor length, see chapter "Technical data" Sensor length, see chapter "Technical data" Sensor length, see chapter "Technical data"

#### EL8

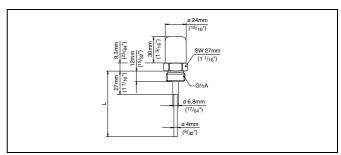



Fig. 26: Conductive rod electrode EL 8

Sensor length, see chapter "Technical data"




## 8 Product code


#### **VEGAKON 61**

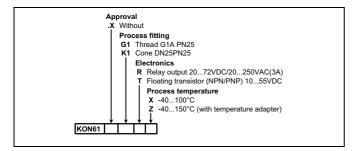


#### **VEGAKON 66**

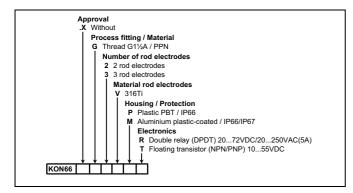


#### EL1

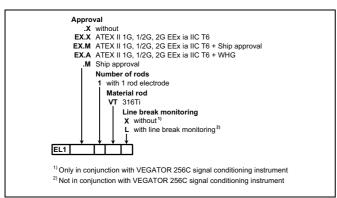


#### EL3

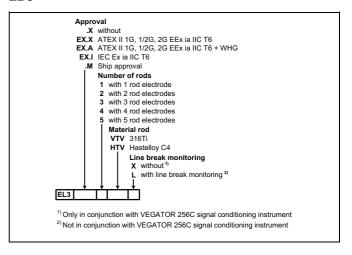


#### EL4

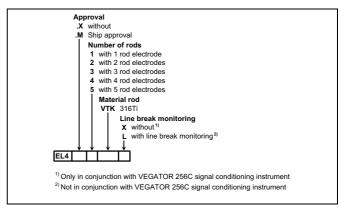

#### EL6

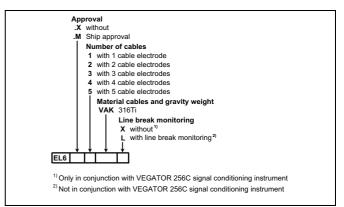

#### EL8

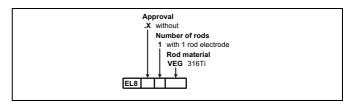













VEGA Grieshaber KG



THORNE & Thorne & Derrick

DERRICK +44 (0) 191 490 1547

INTERNATIONAL www.heatingandprocess.com

- certificates
- approvals and much, much more